


# BR-030

## Installation Instructions

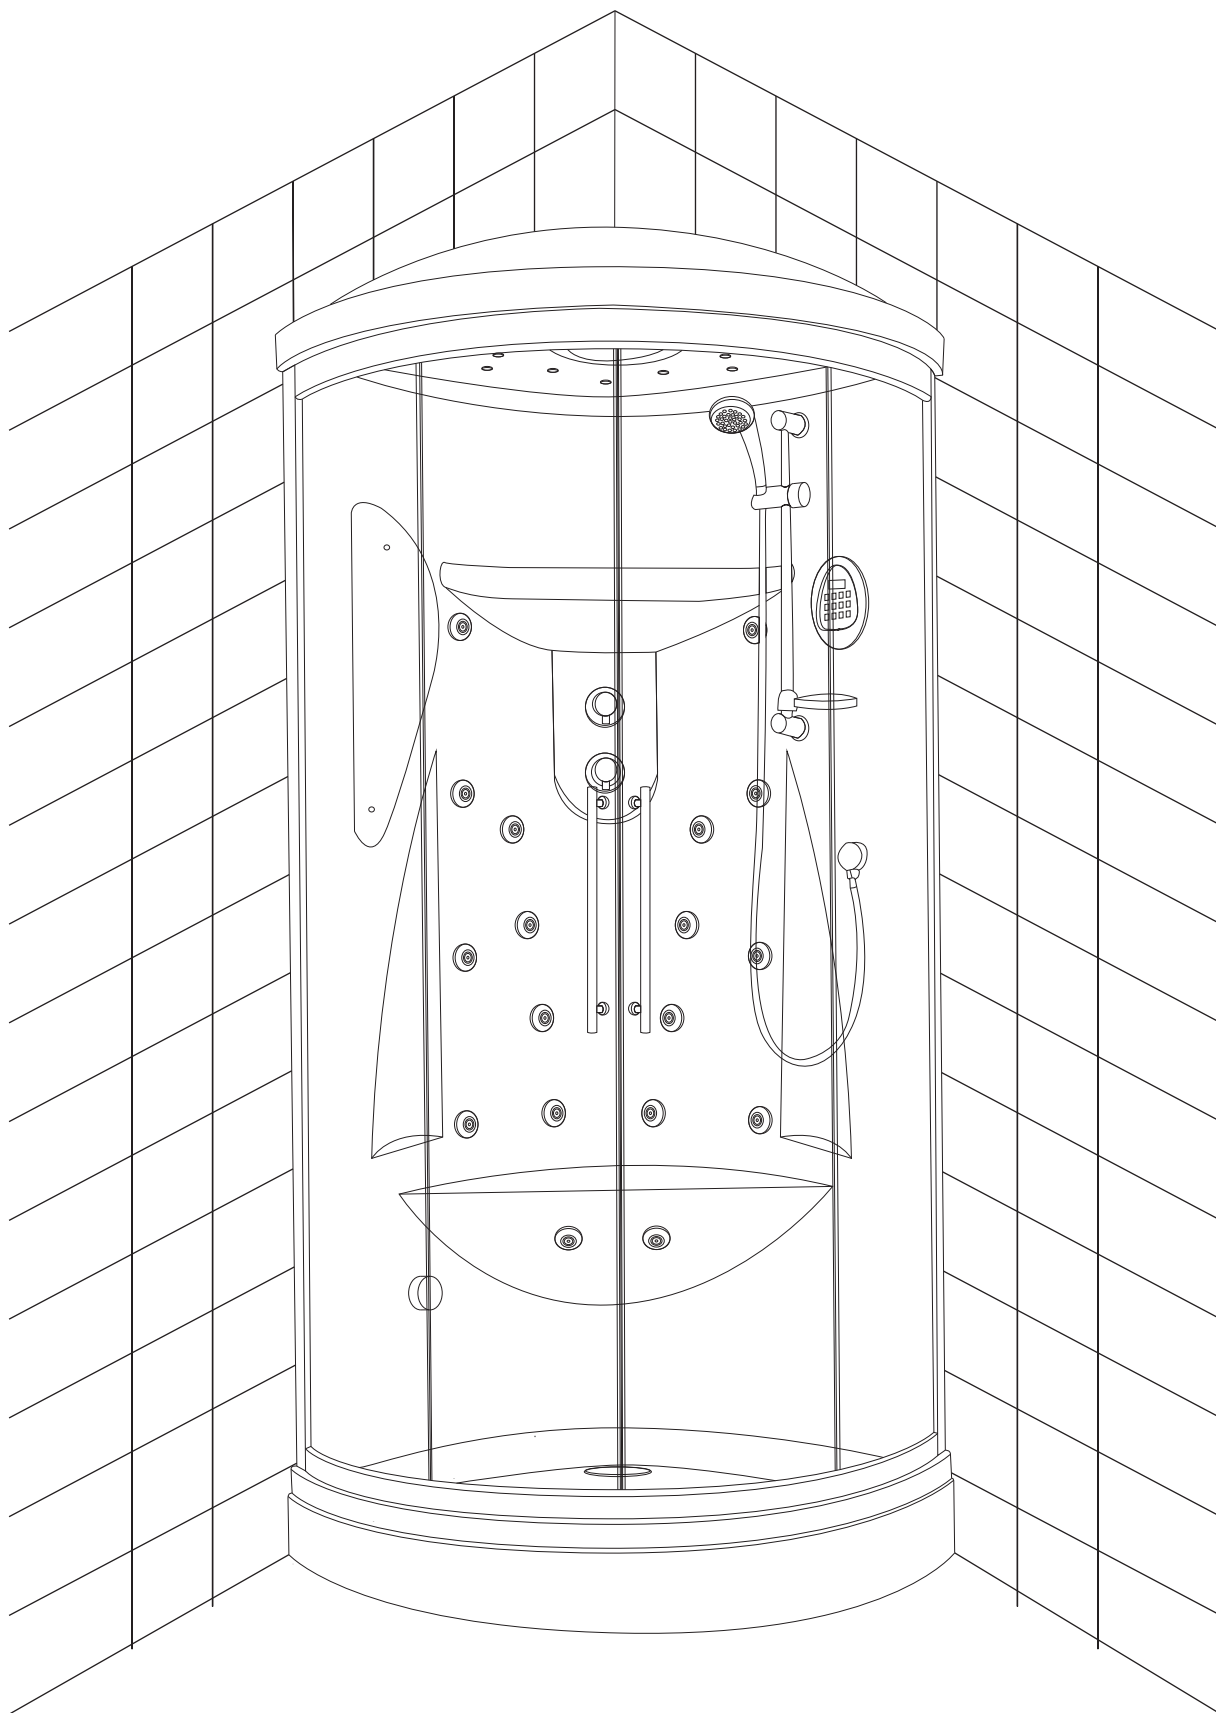

**SIZE : 90\*90\*220 CM**


# BR-030

## Installation Instructions


### TOOLS REQUIRED(NOT SUPPLIED)

when you're ready to start. make sure that you have the following tools to hand, plenty of space and a clean dry area for assembly.

Two people are needed. Please note: although these instructions are comprehensive, We always recommend that a technically competent installer should undertake installation.


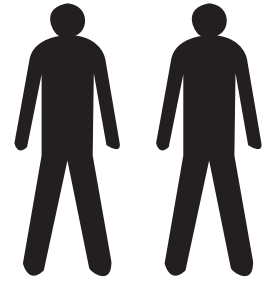


Drill beat head  
4mm

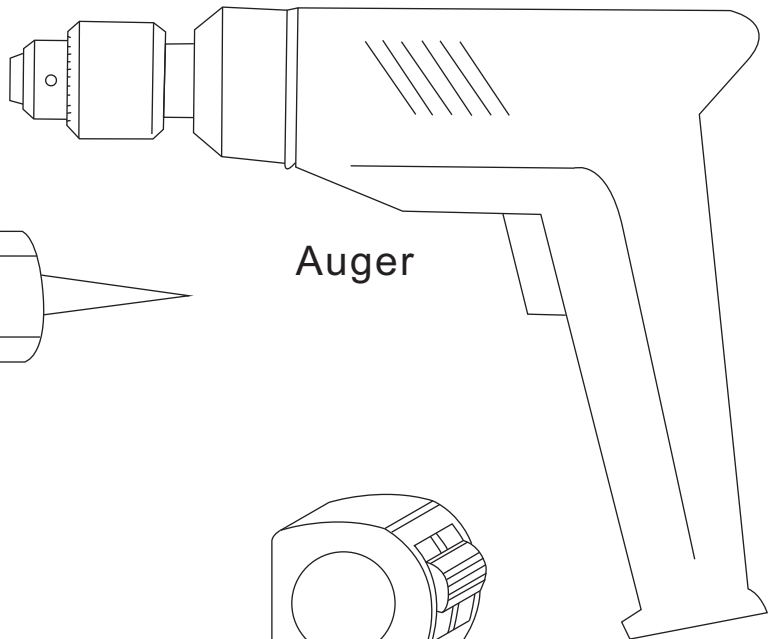


Auger


Sanitary Silicone

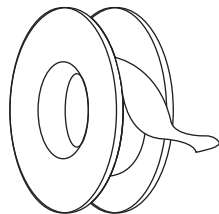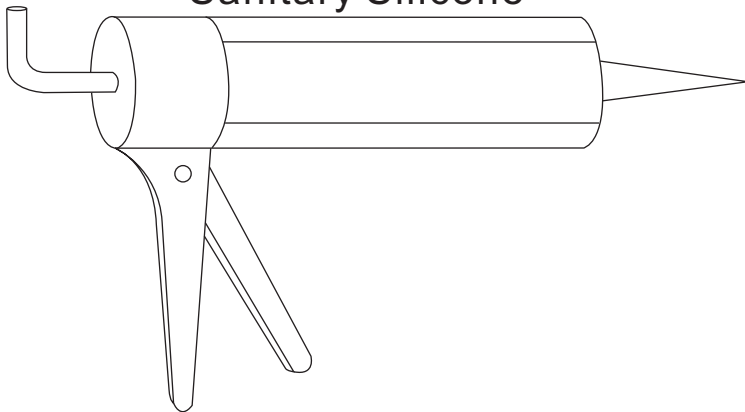


PTFEtape

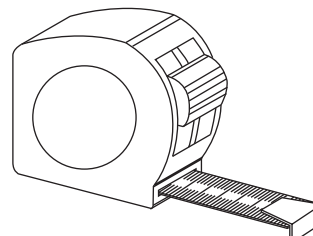


Tape measure



Pencil





Magnetic crosshead screwdriver

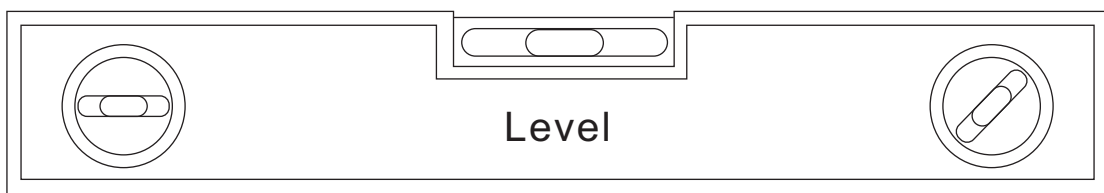


Level

# BR-030


## Installation Instructions

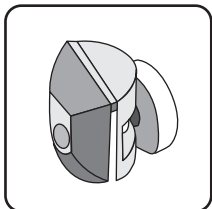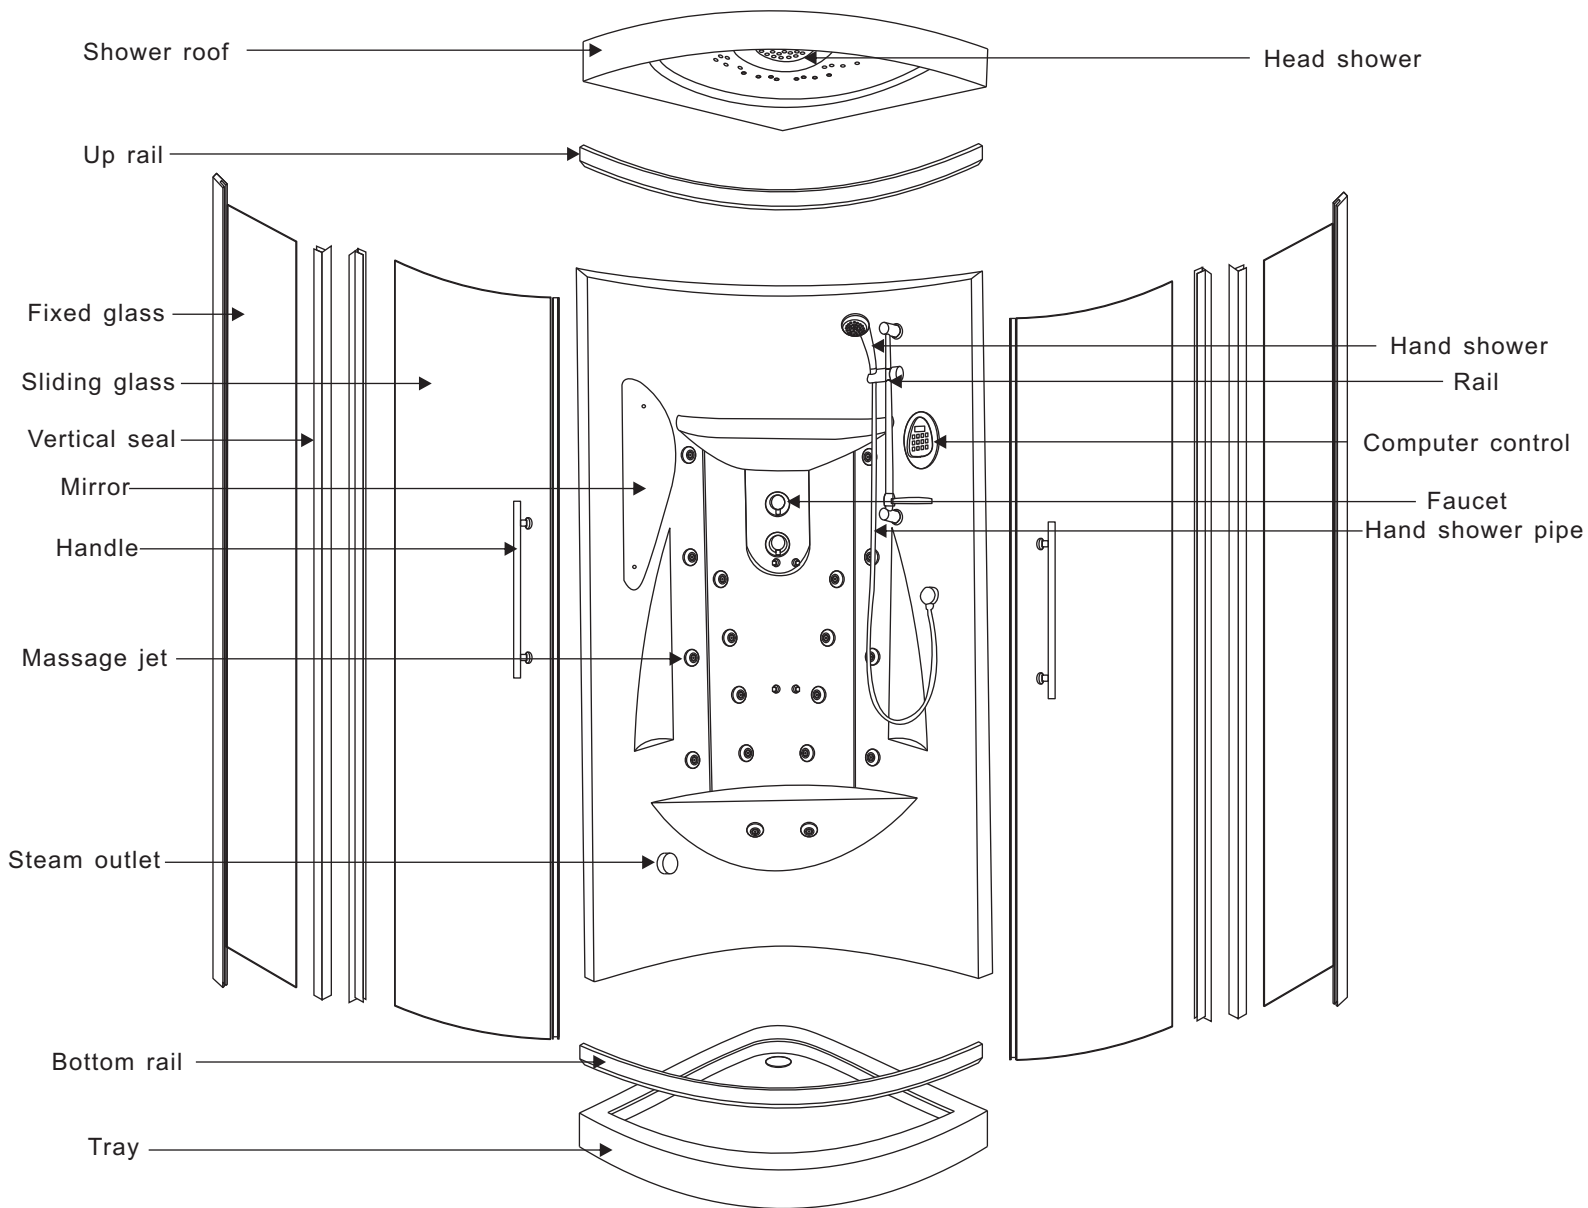


4PCS

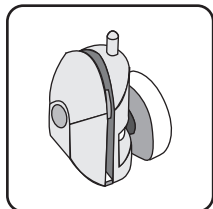


4PCS

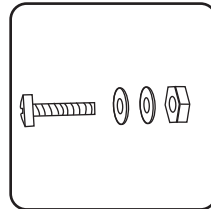


6x16mm  
6PCS

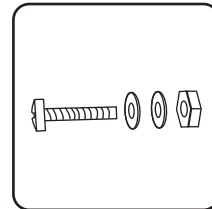


6x25mm  
6PCS

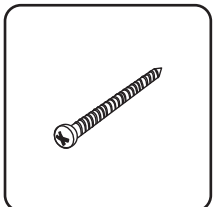


3.5x55mm  
8PCS

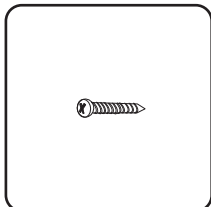


4x14mm  
14PCS

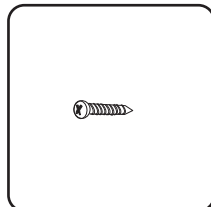

4x12mm  
4PCS

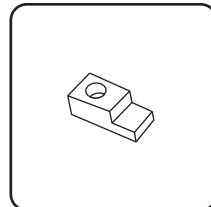

4PCS

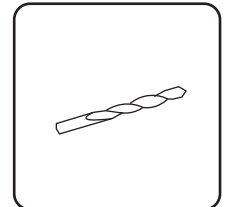


3mm drill

# BR-030

## Installation Instructions



### Diagram of the back tube

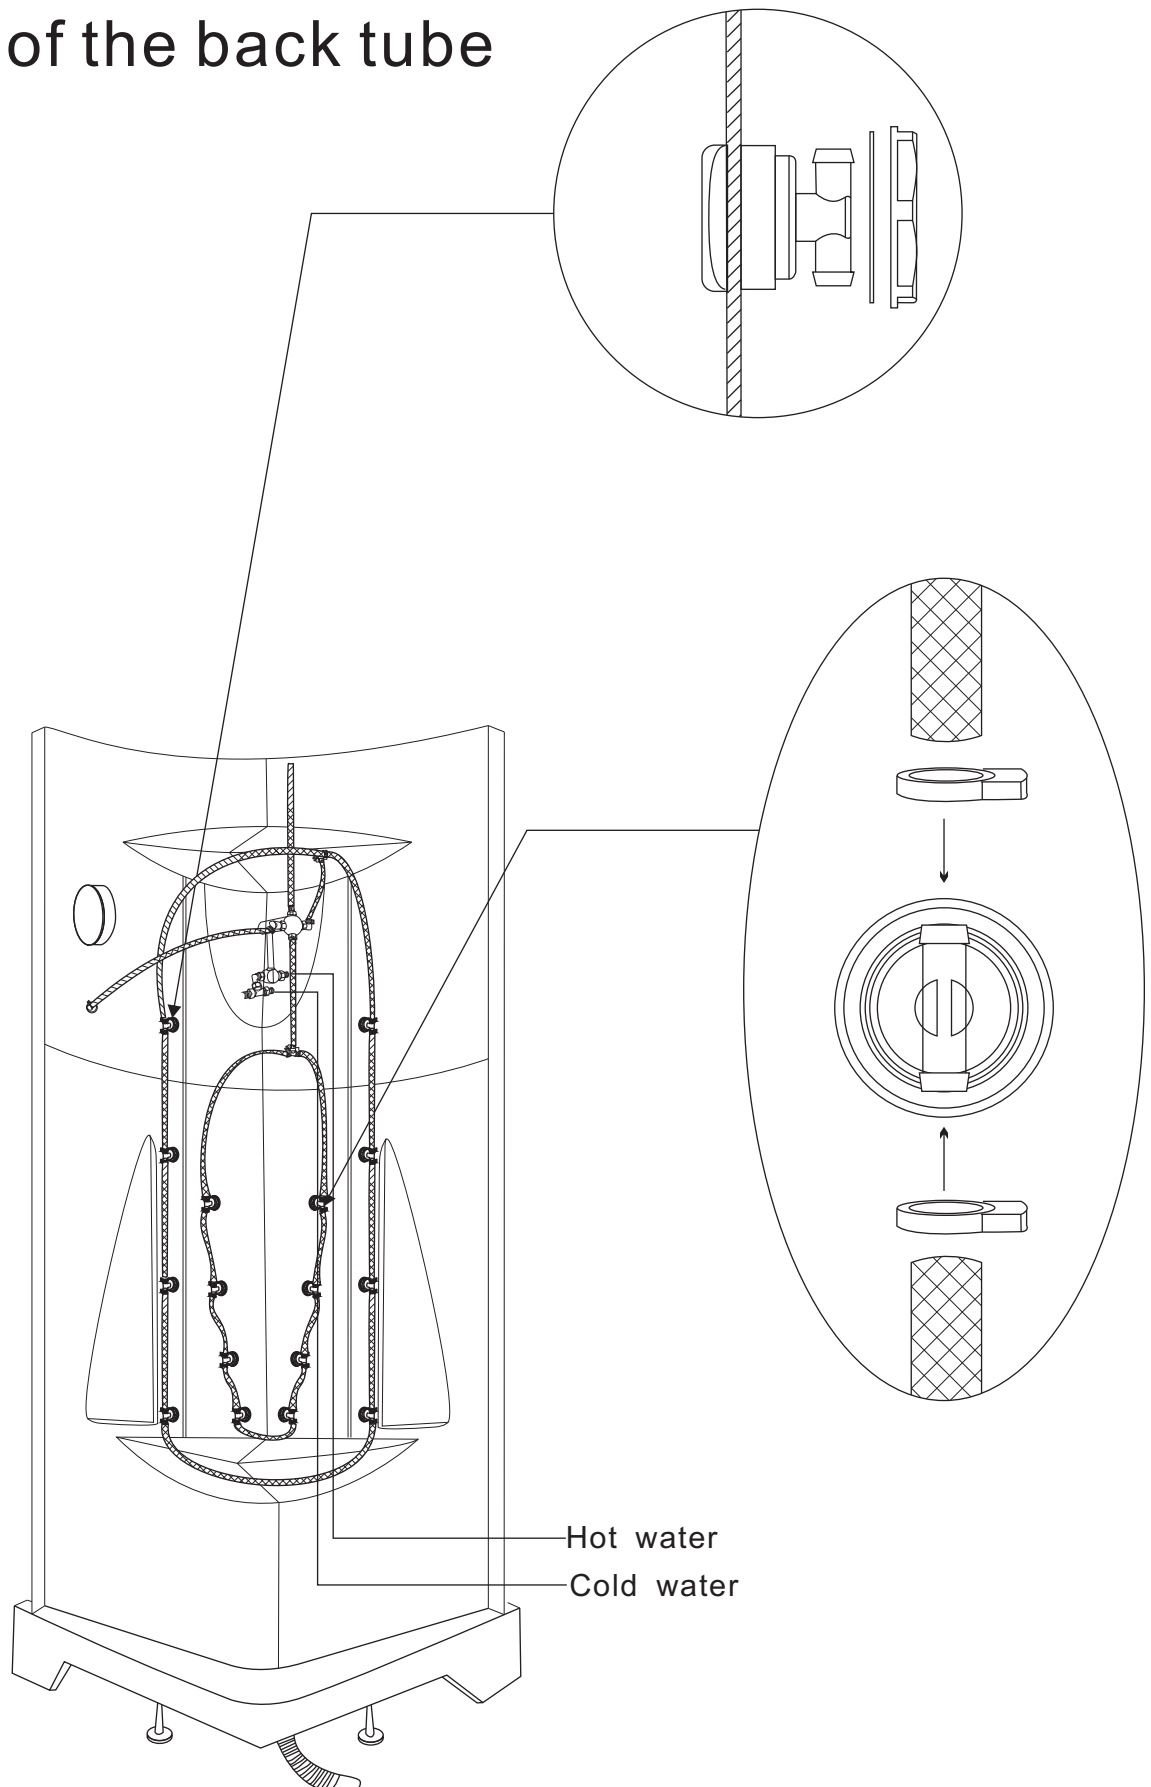

# BR-030



## Installation Instructions

The rail installation diagram

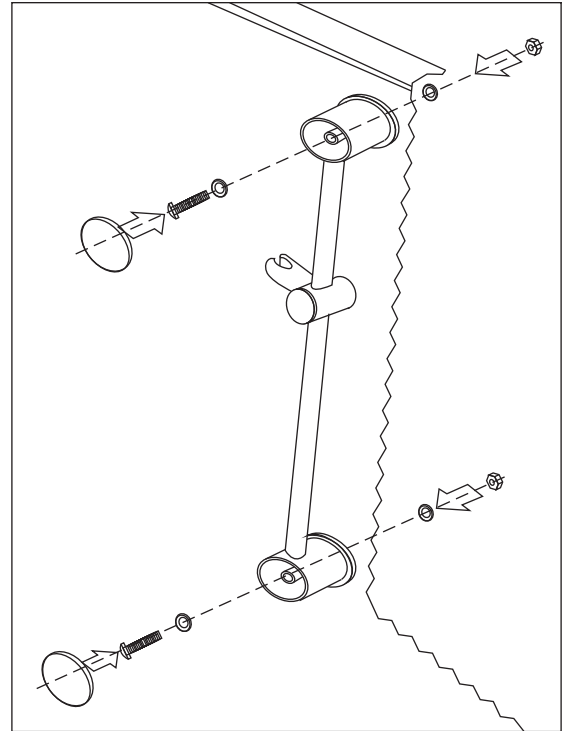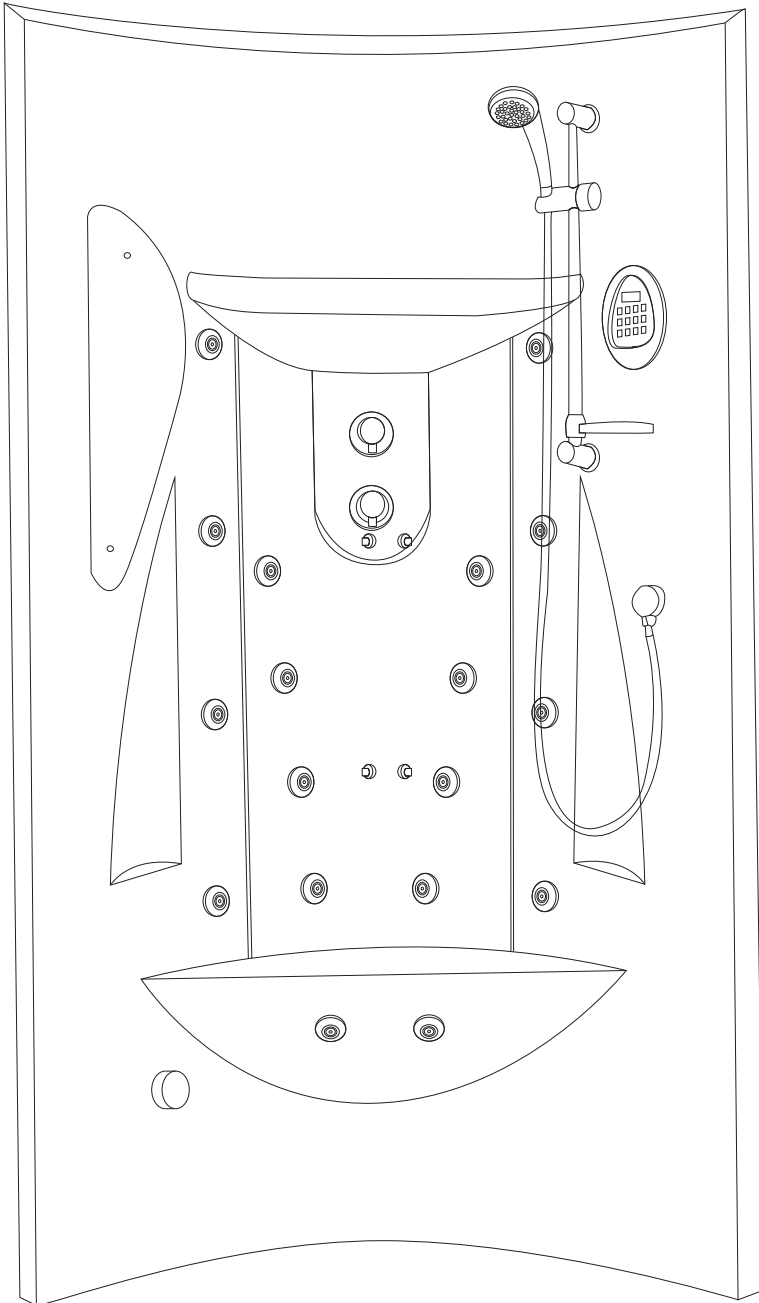





# BR-030

## Installation Instructions

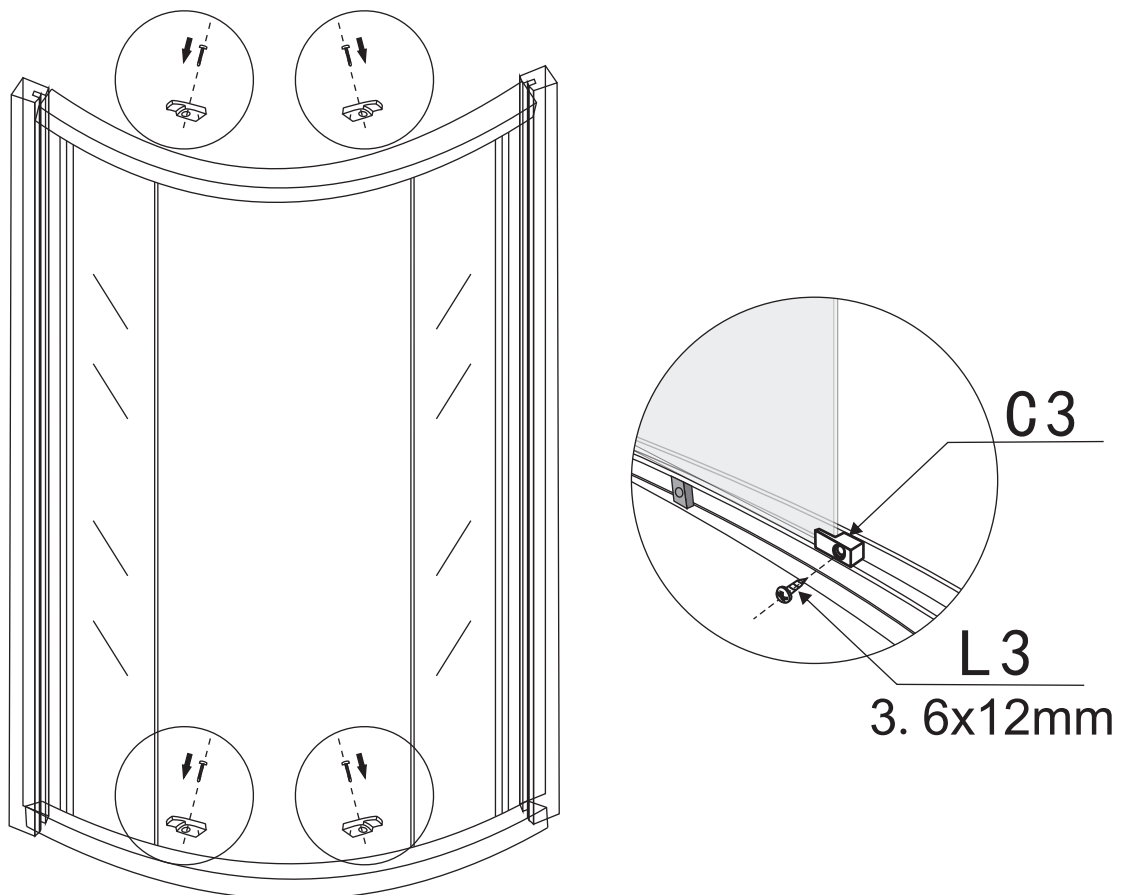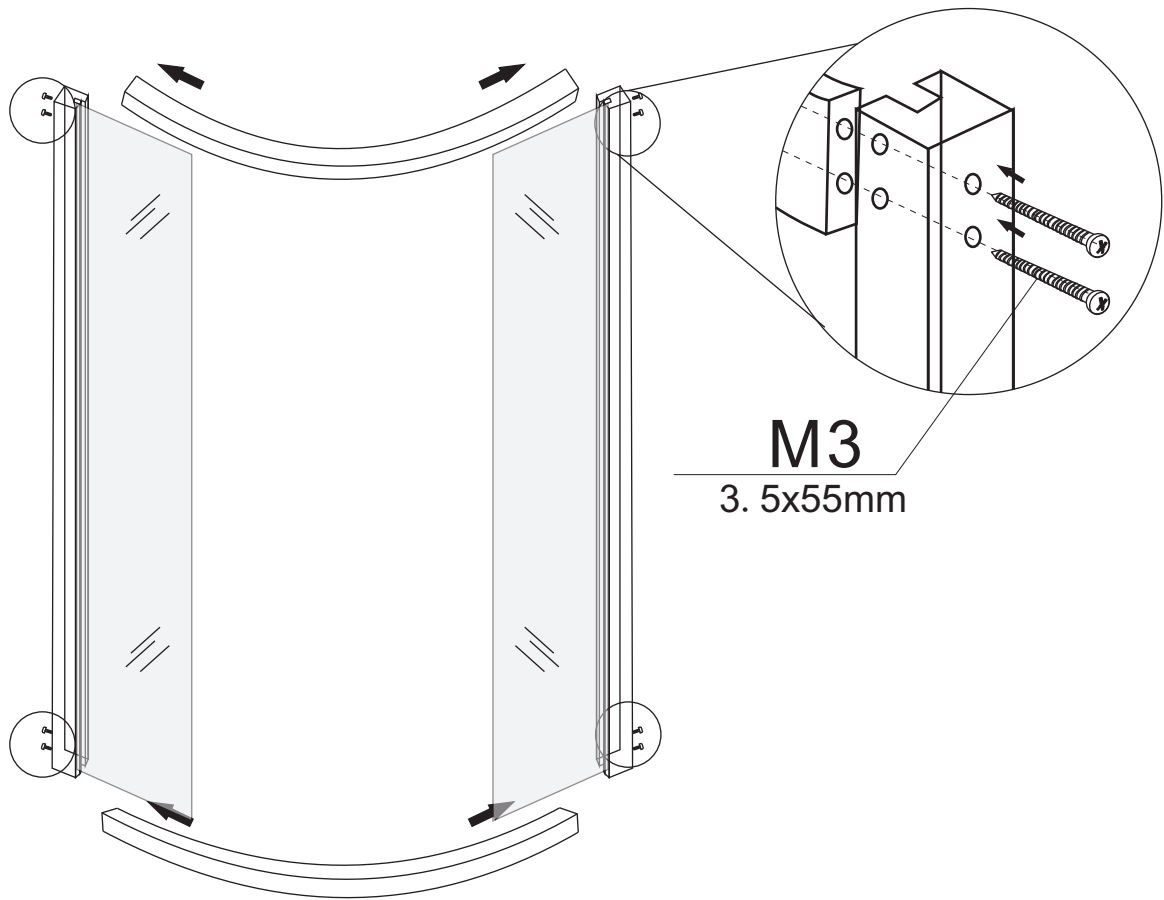

# BR-030



## Installation Instructions

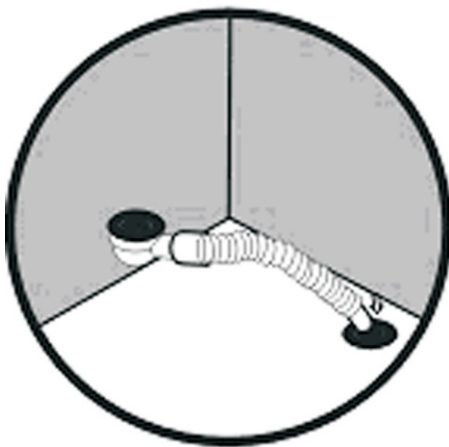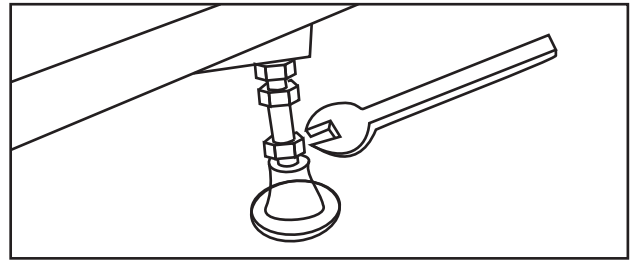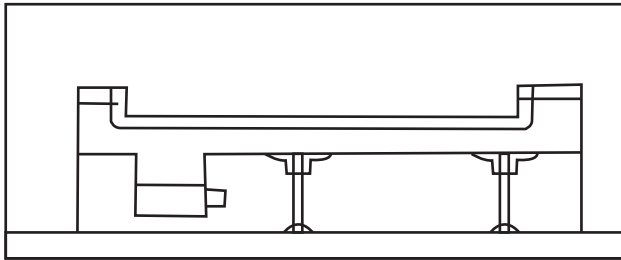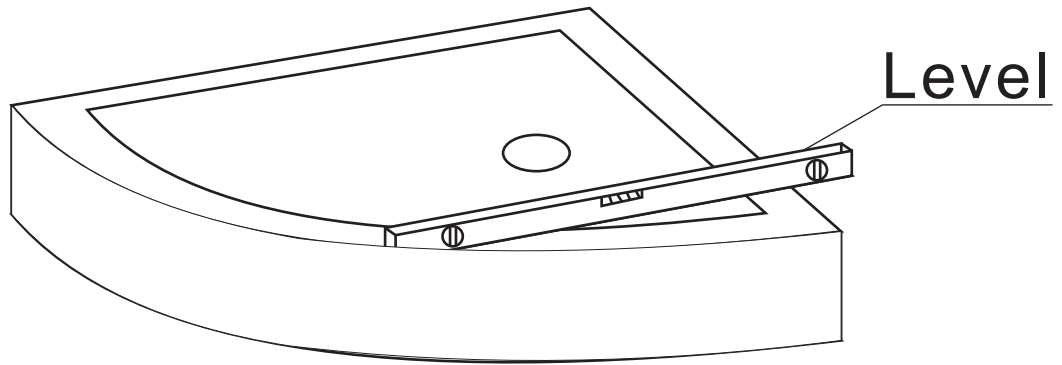

Lift the rear part of bottom basin,  
and then insert one end of the pipe  
into the drainage hole

# BR-030








## Installation Instructions

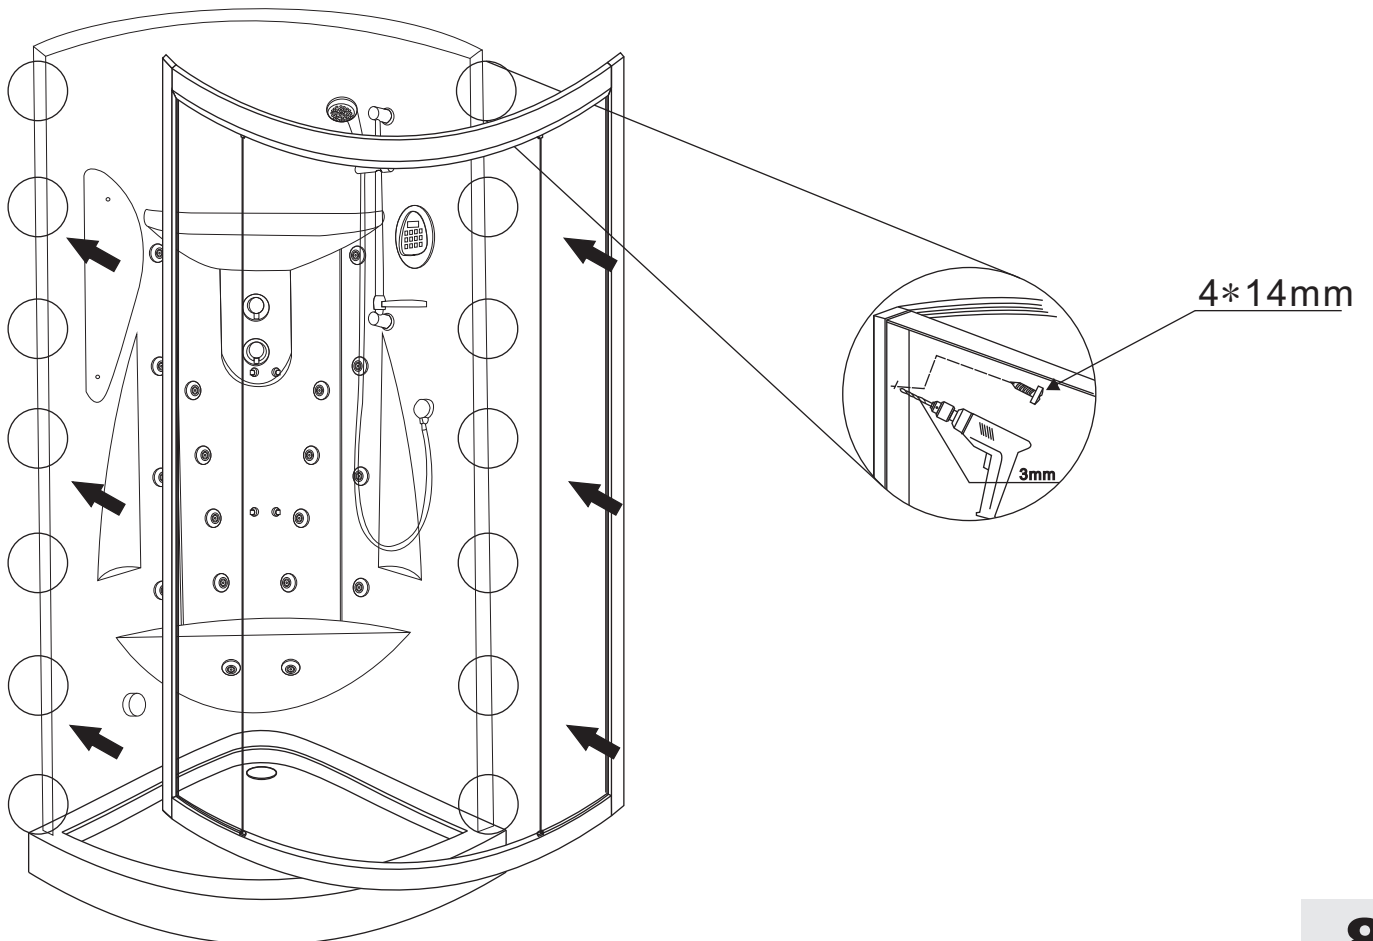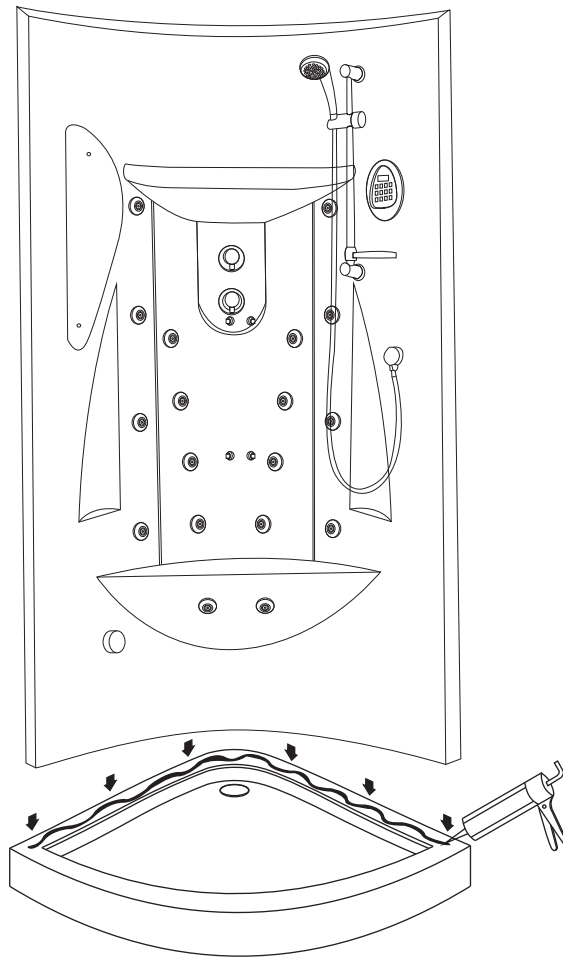







# BR-030

## Installation Instructions

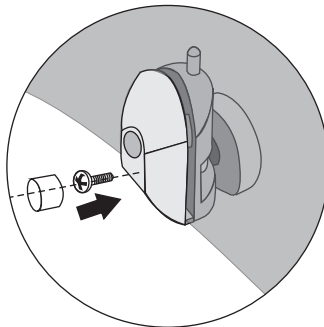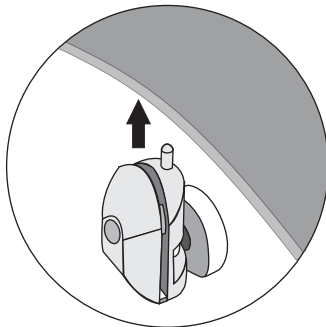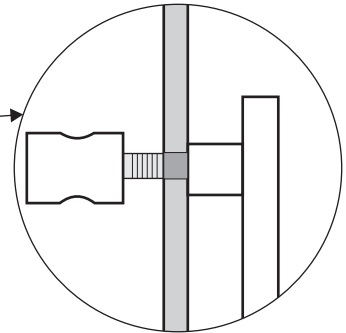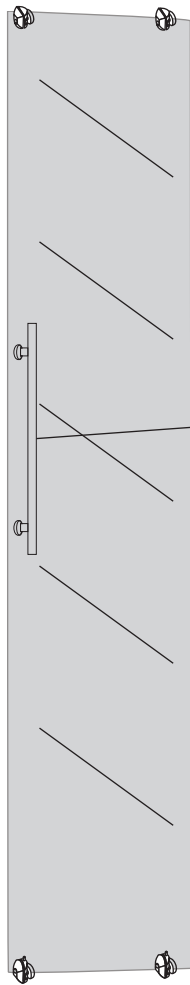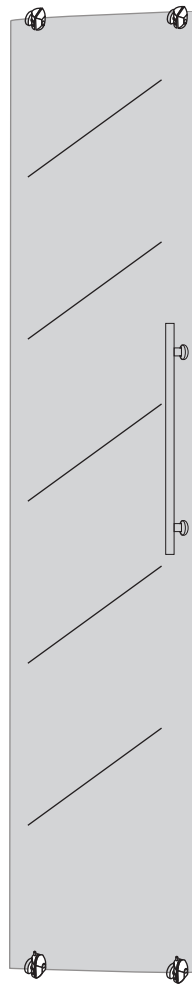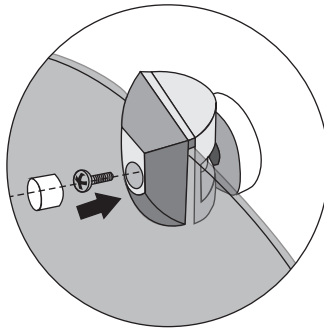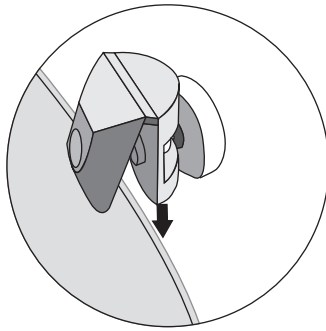


# BR-030

## Installation Instructions

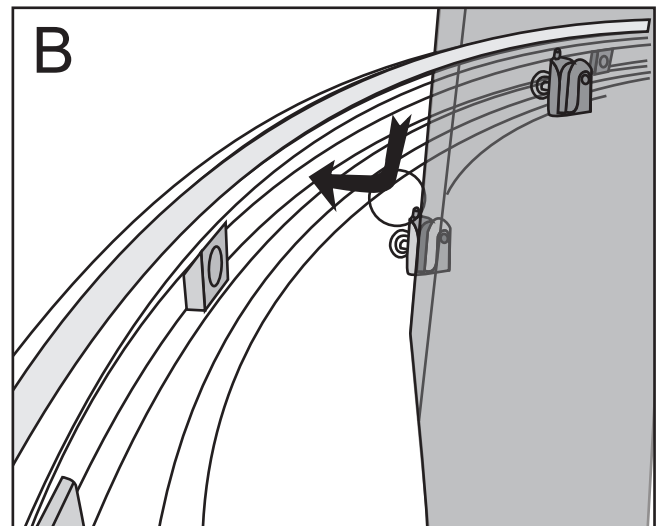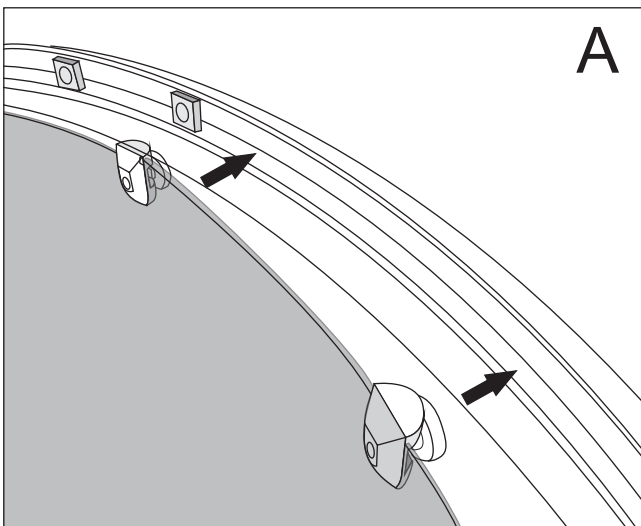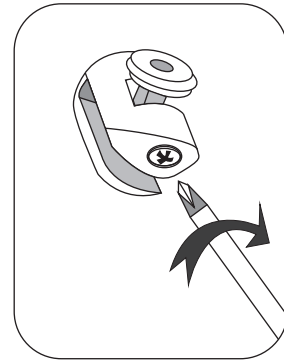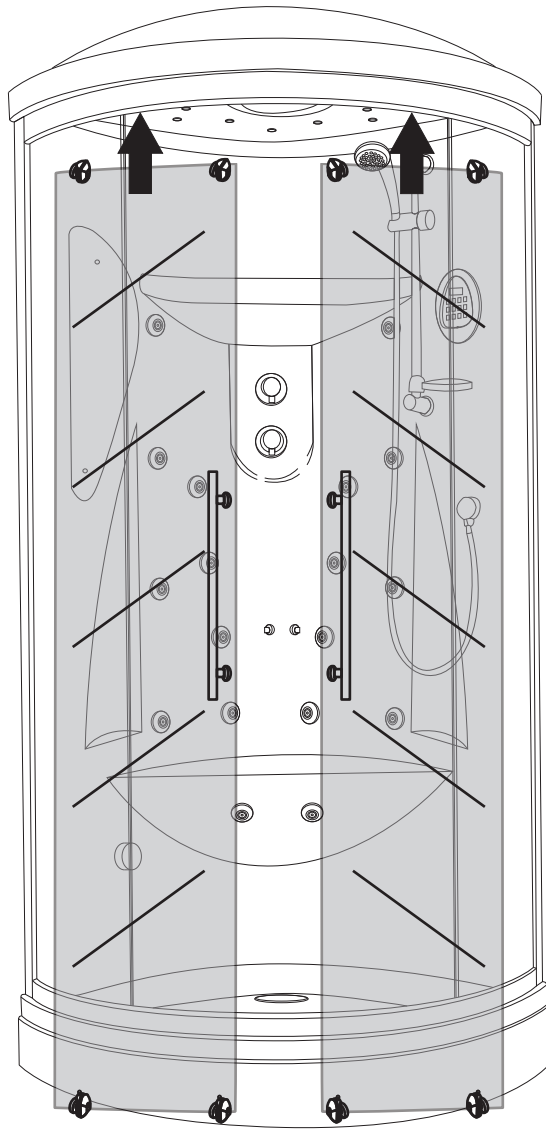


# BR-030

## Installation Instructions

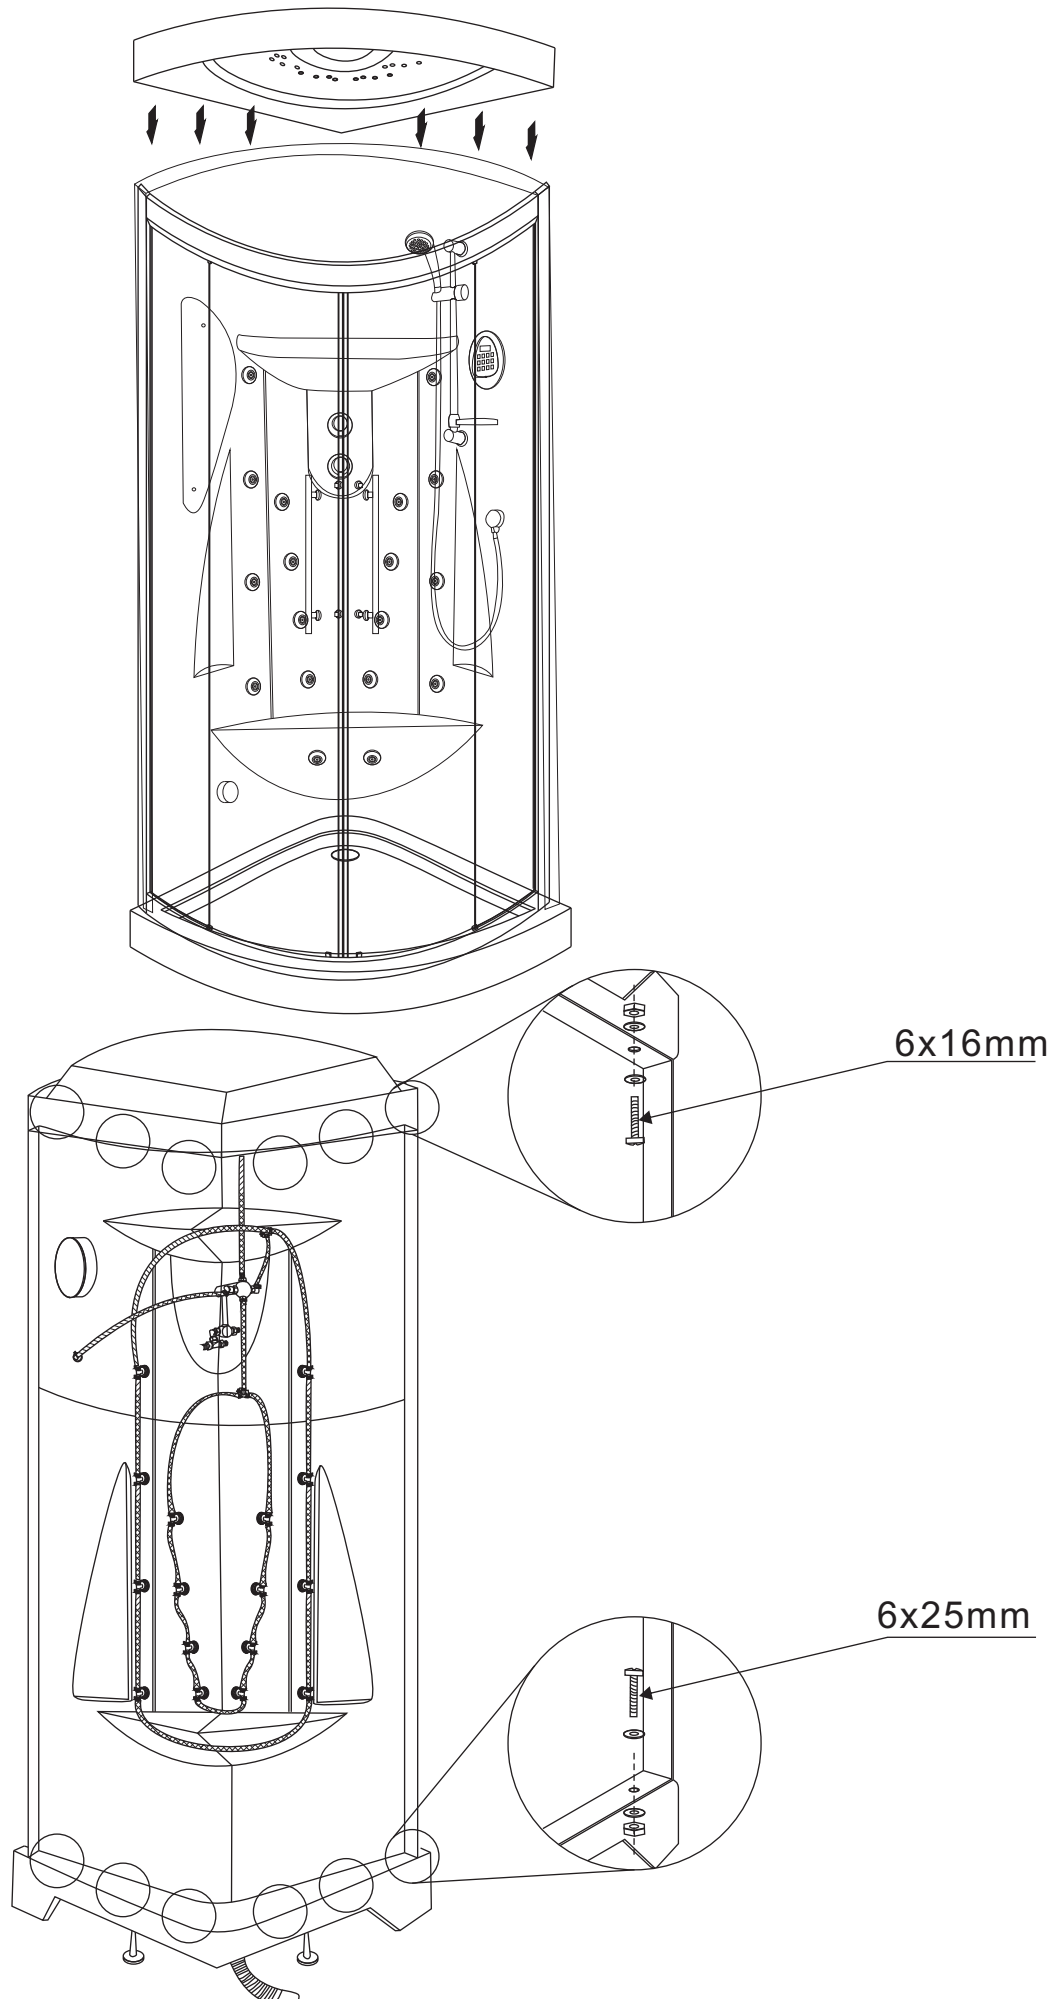

# BR-030


## Installation Instructions

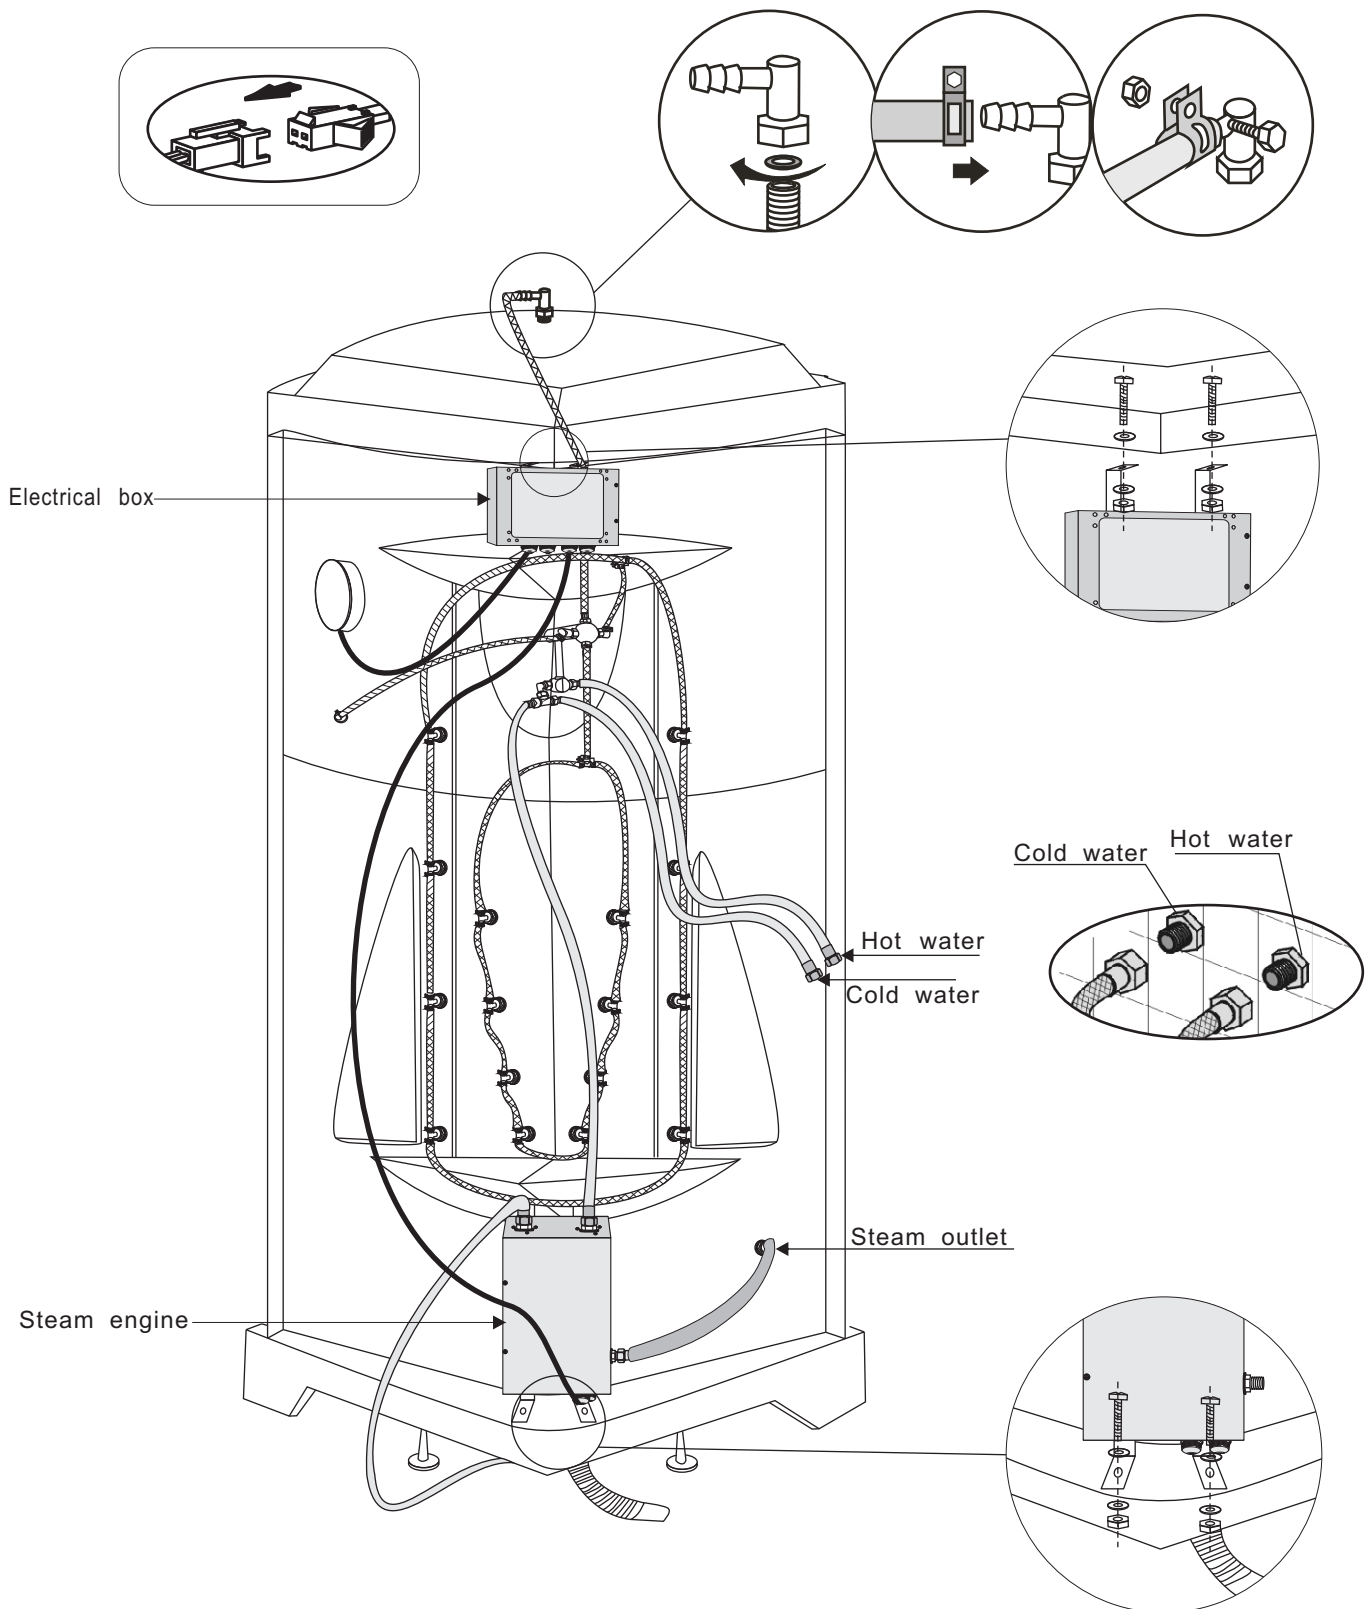

connect the electrical wire of bunglea,power and etc.correctly,connect the hose of head shower,hot water hose and cold water hose correctly,put the antenna to the top.

# BR-030

## Installation Instructions

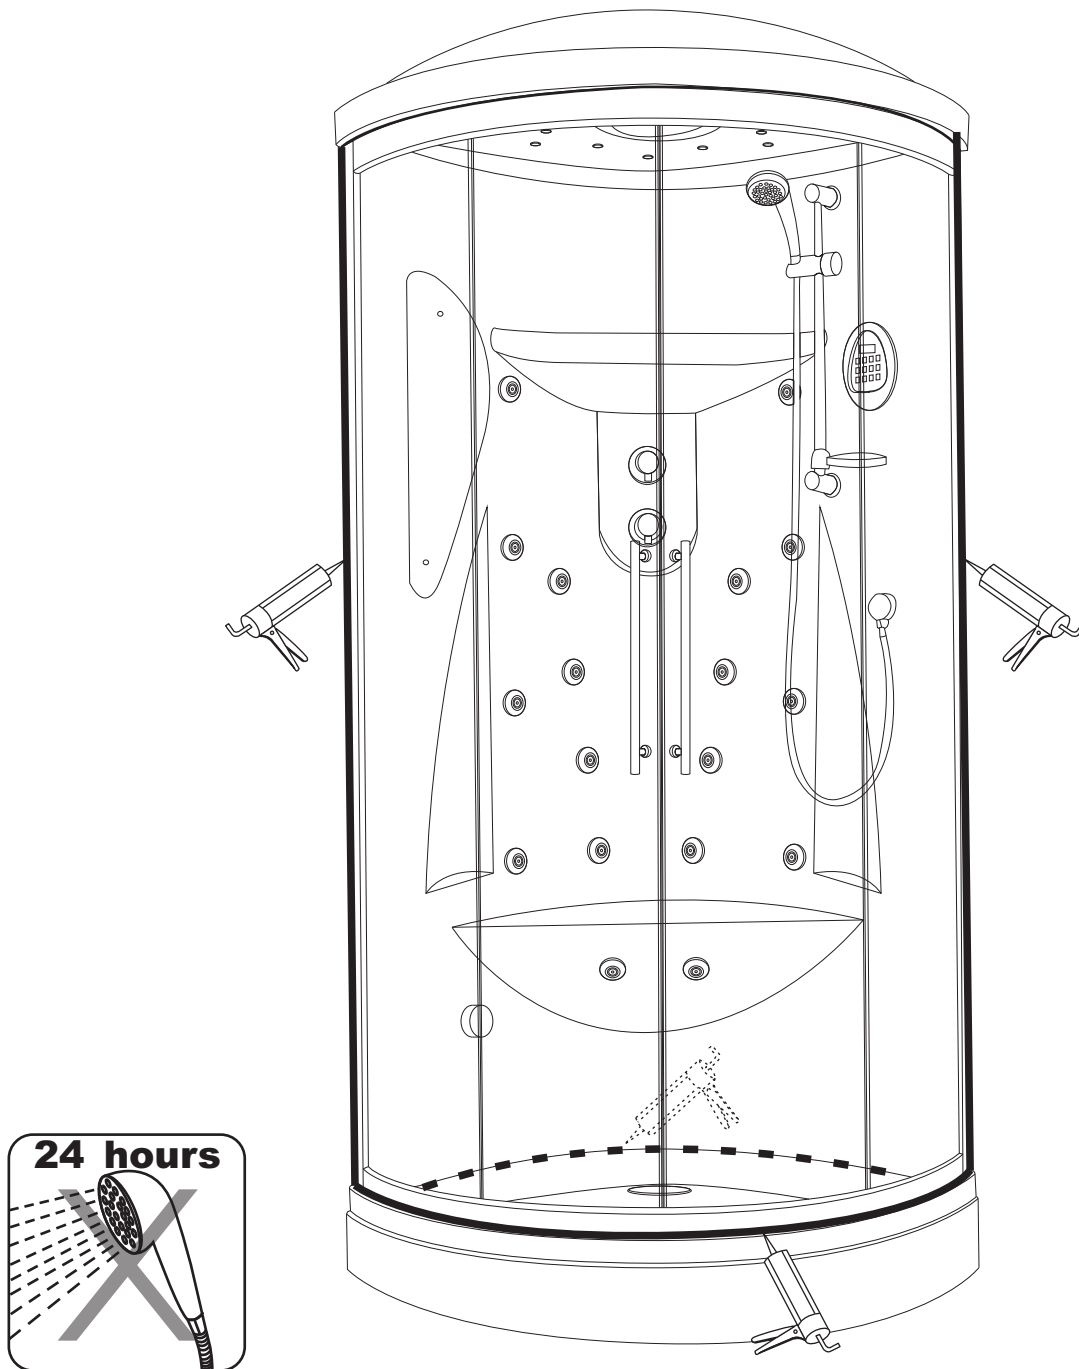

-Apply Sanitary Silicone Only As Shown Above To The Joints And Exterior Of The Cabin. Do Not Apply Silicone Sealant To The Inside Of The Enclosure.

-Do Not Use The Enclosure For 24 Hours, To Allow The Silicone To Dry Completely .