



HX-137 WITH STEAM

Installation instructions

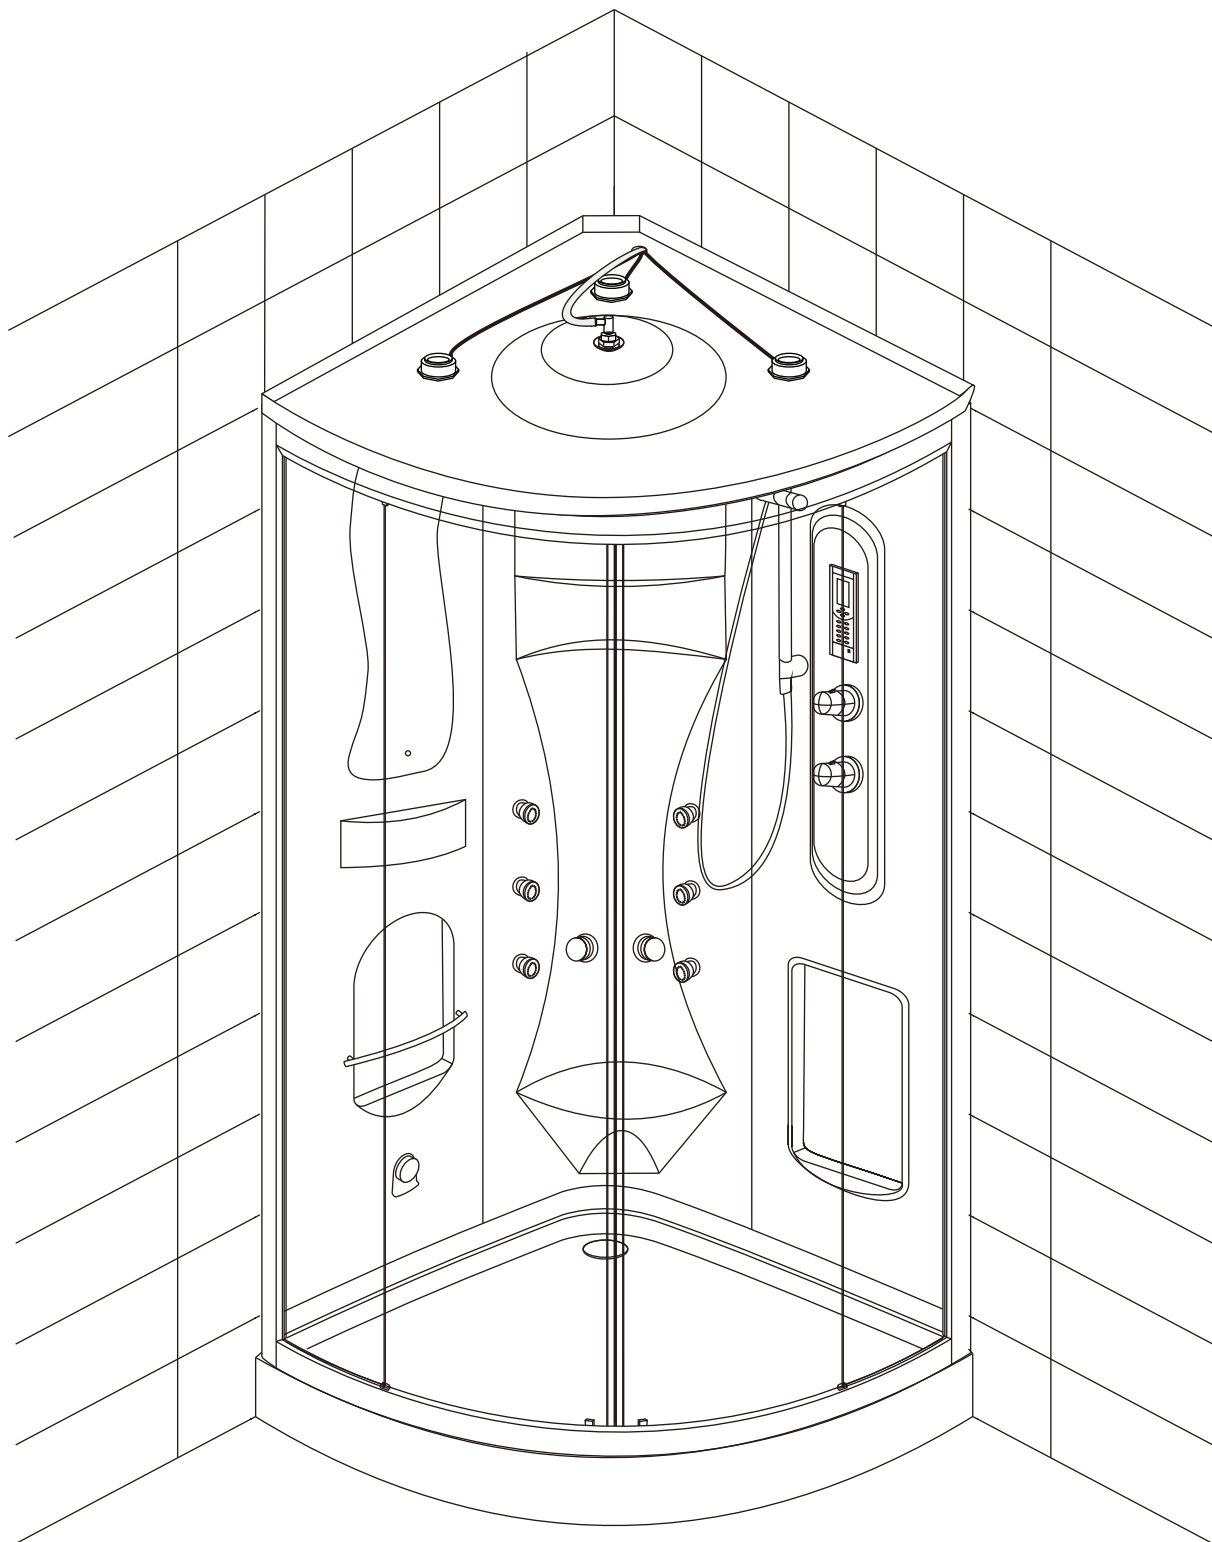



SIZE : 90*90*213 CM




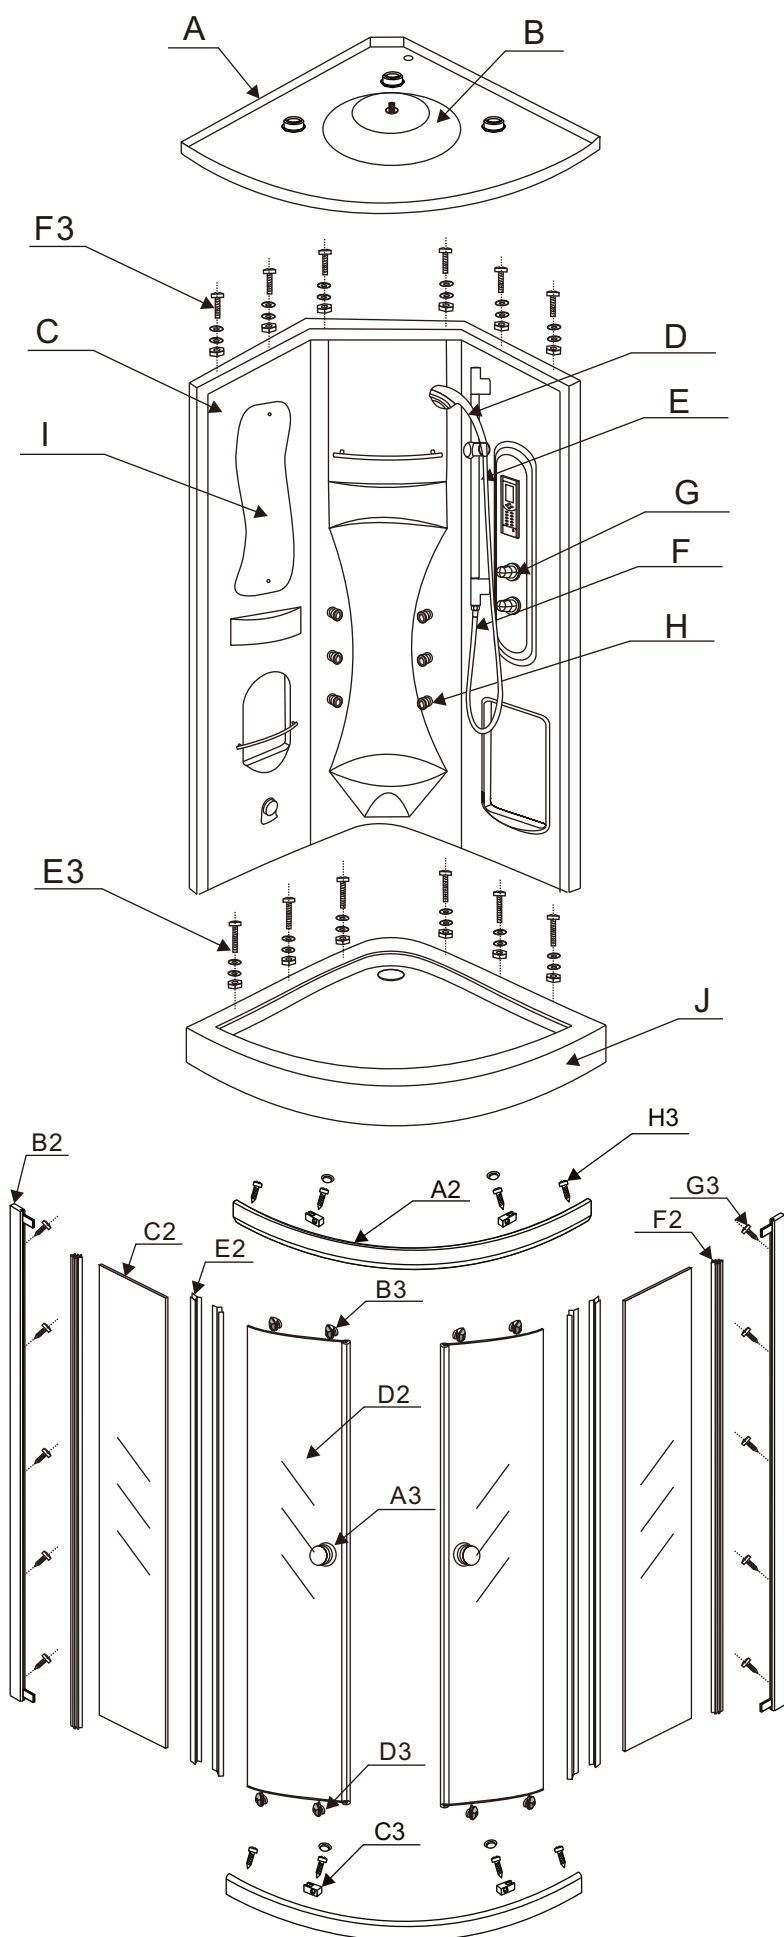


Ref	Description	Qty
A	Shower roof	1
B	Head shower	1
C	Shower back	1
D	Hand shower	1
E	Riser rail	1
F	Shower hose	1
G	Faucet	1
H	Massage jet	6
I	Mirror	1
J	Shower tray	1


Ref	Description	Qty
A2	ARC PROFILE	2
B2	WALL PROFILE	2
C2	FIXED DOOR	2
D2	SLIDING DOOR	2
E2	VERTICAL SEAL FOR FIXED GLASS	4
F2	THONG	2




Ref	Description	Illustration	Qty
A3	Handle		2
B3	Upper pulley		4
C3	u-shaped clip		4
D3	Bottom pulley		4
E3	screws: 6*25mm		6
F3	screws: 6*16mm		6
G3	screws: 4*16mm		16
H3	screws: 4*10mm		4
I3	Drill beat head 3mm		1
J3	Connection for head shower		1

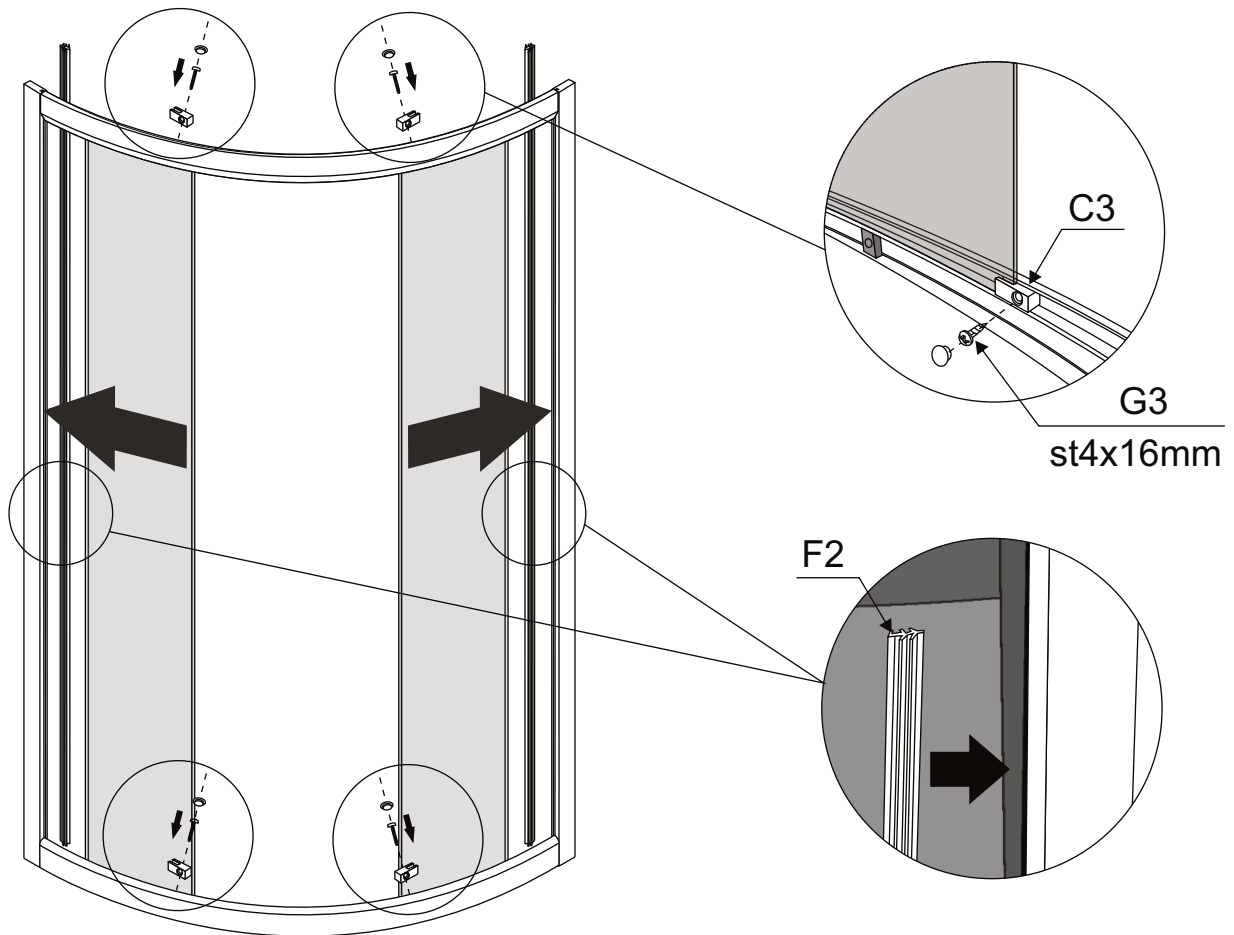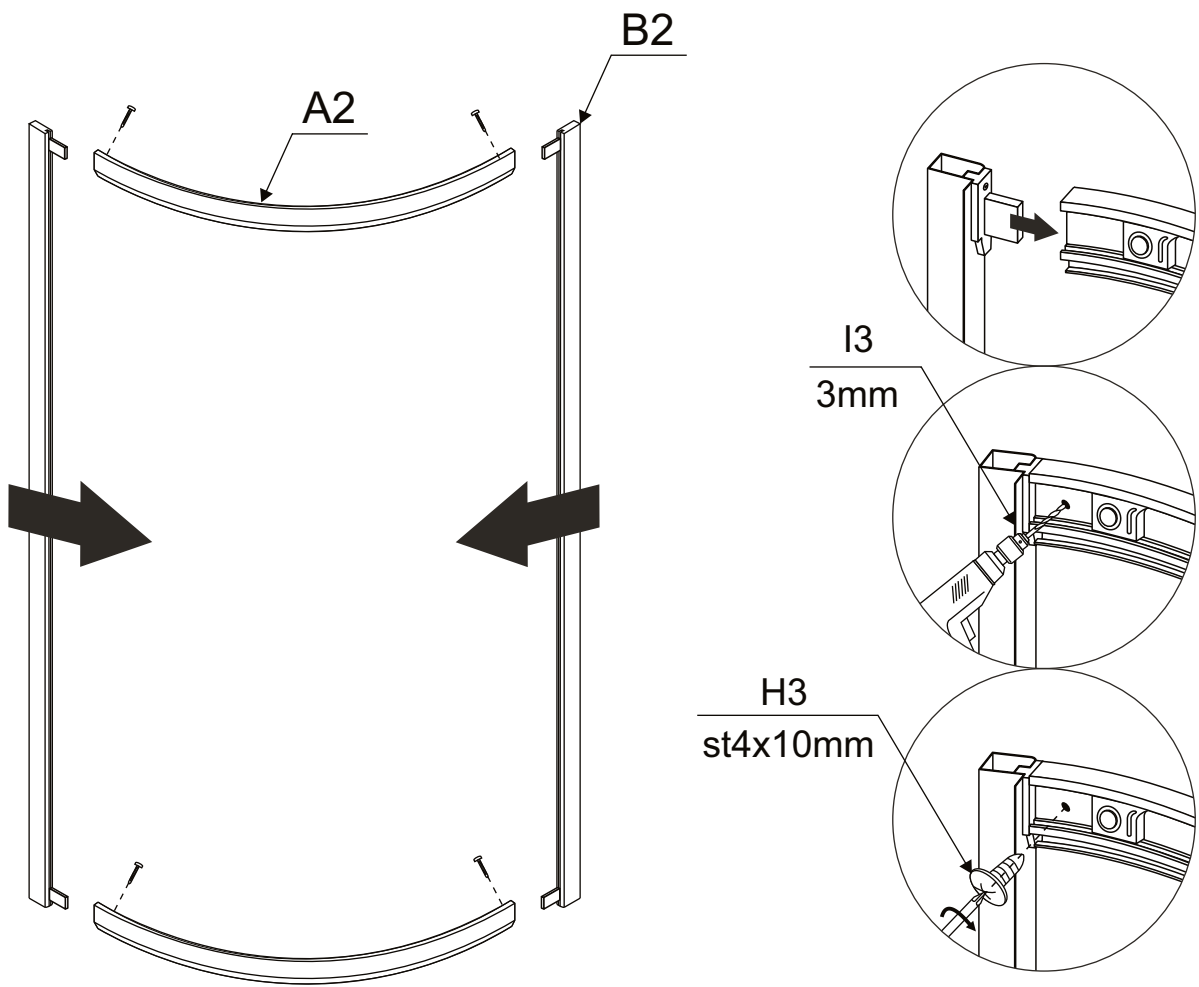






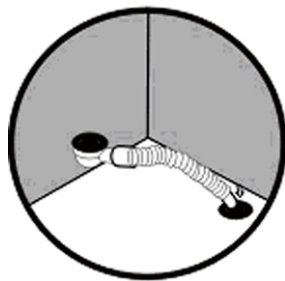
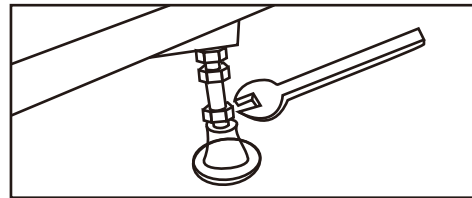
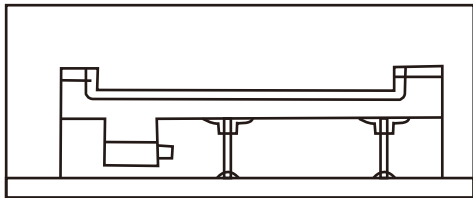
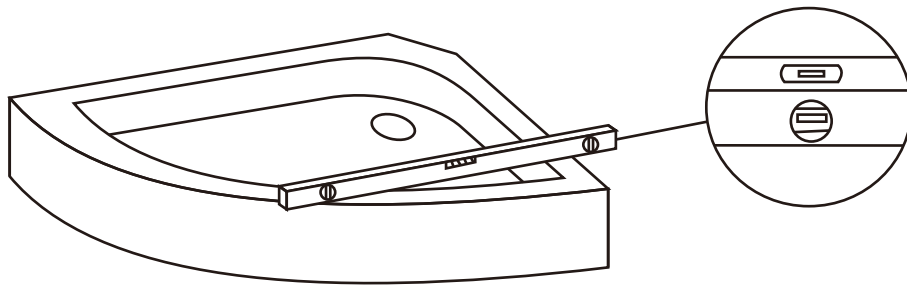



Lift the rear part of bottom basin, and then insert one end of the pipe into the drainage hole

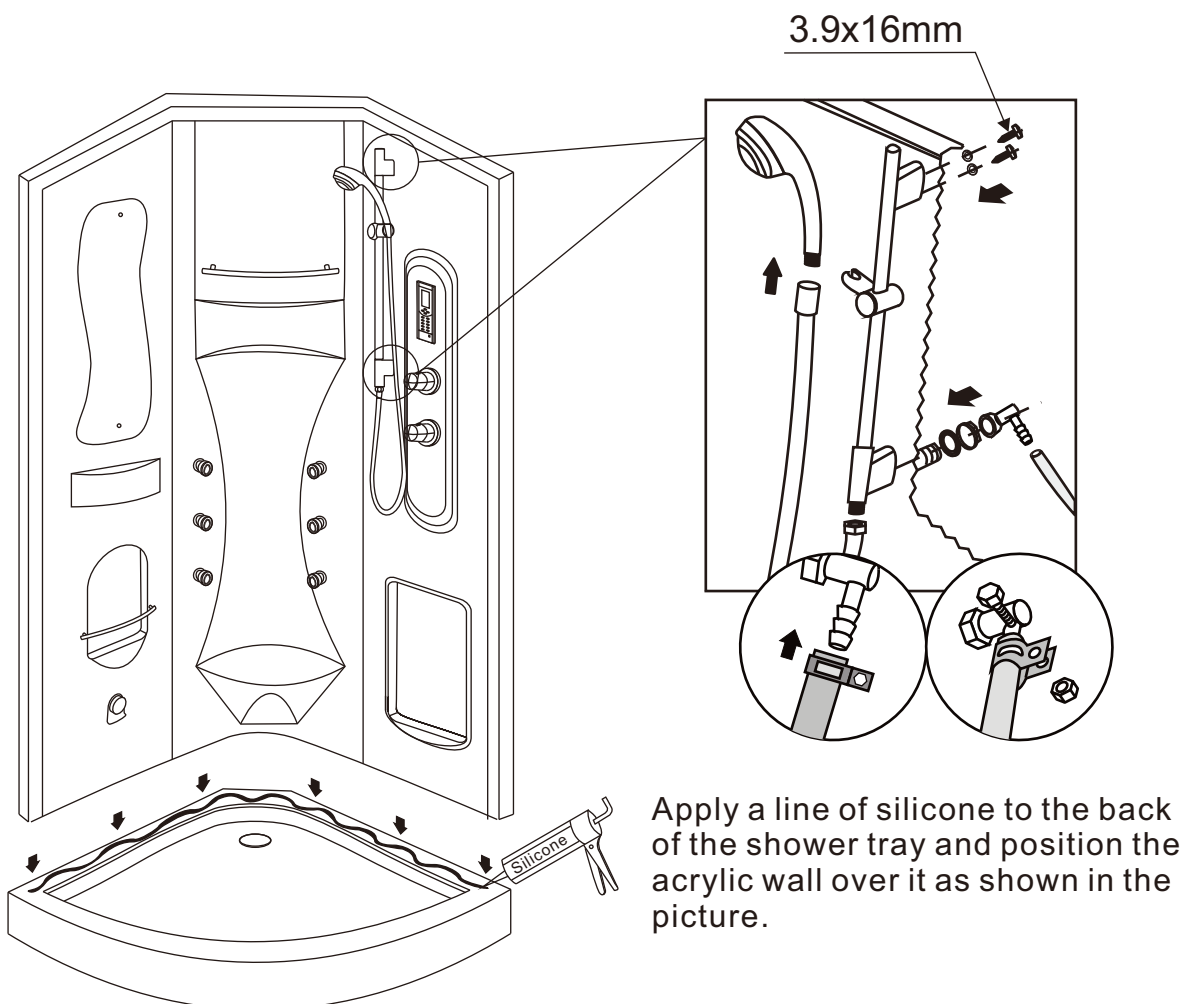


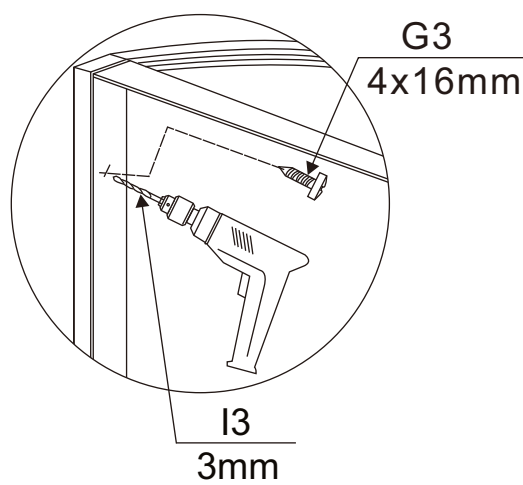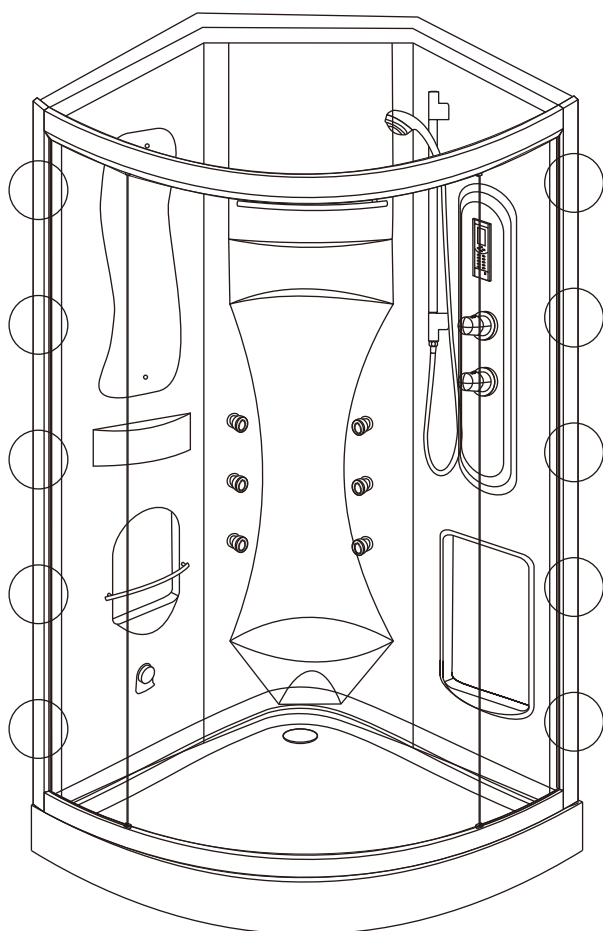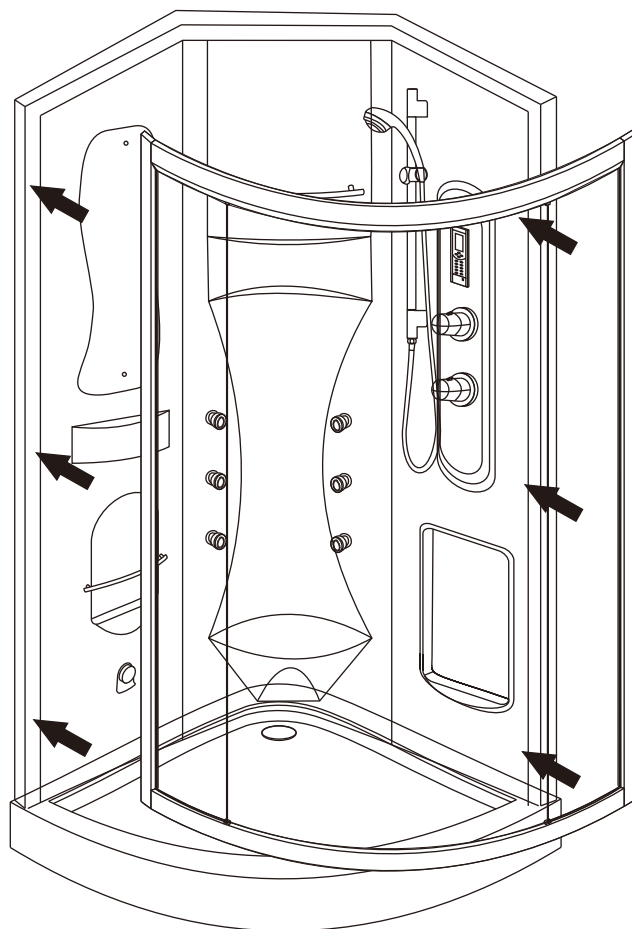

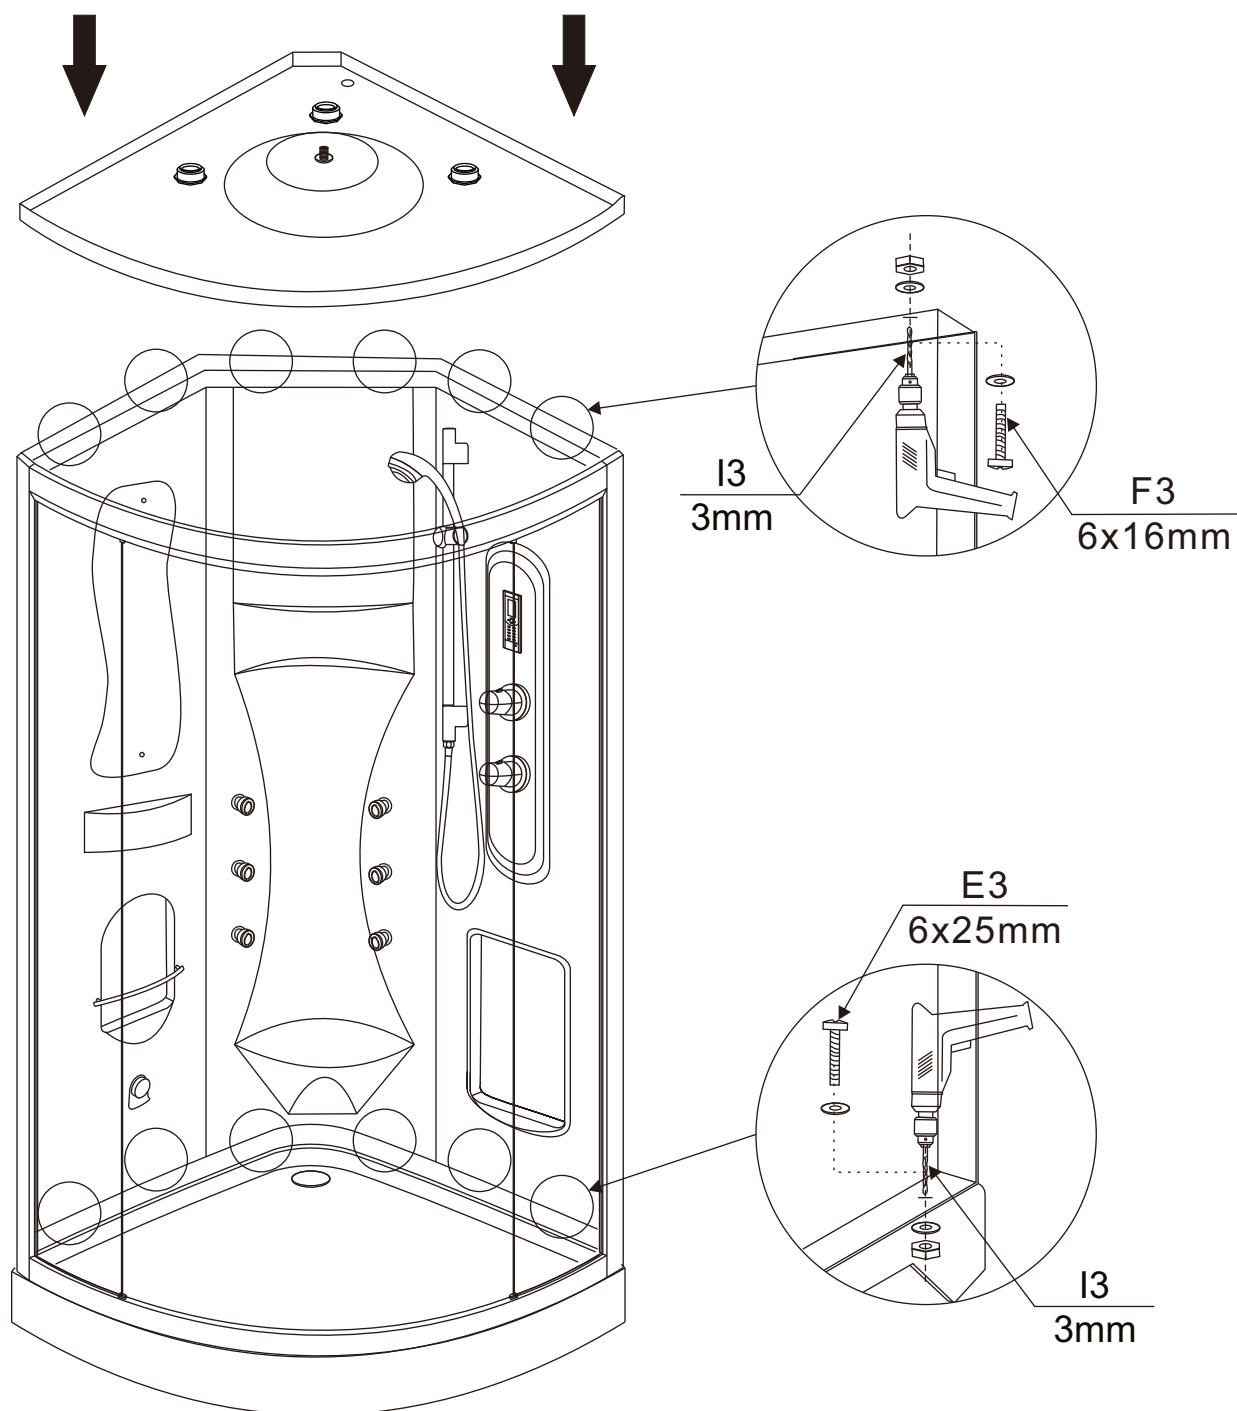

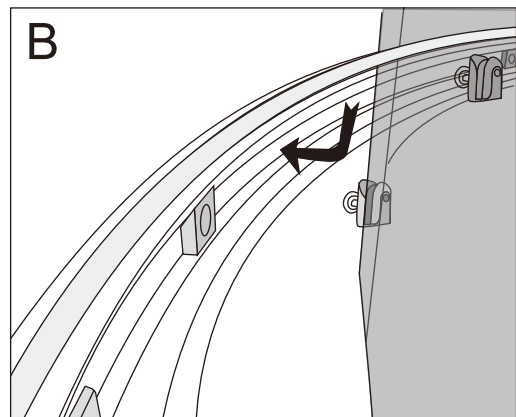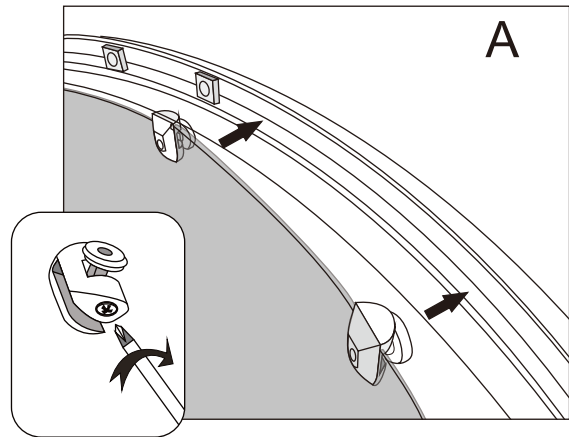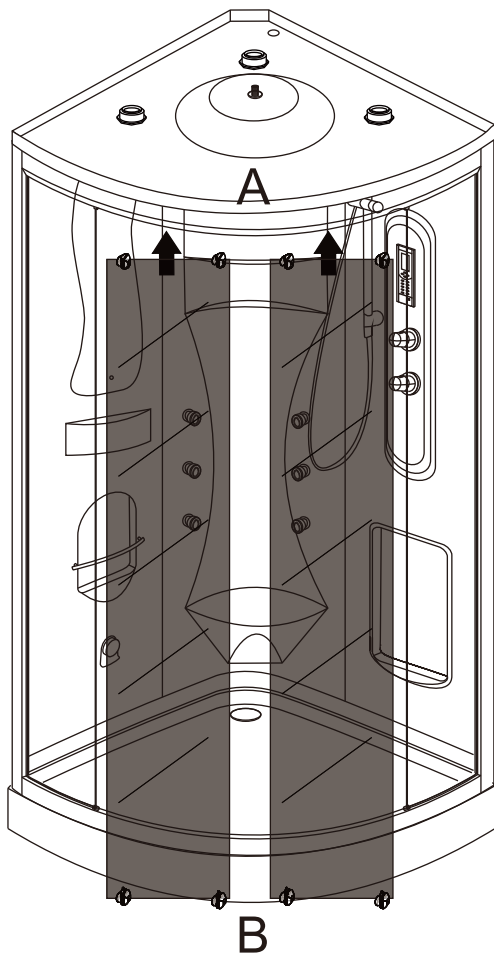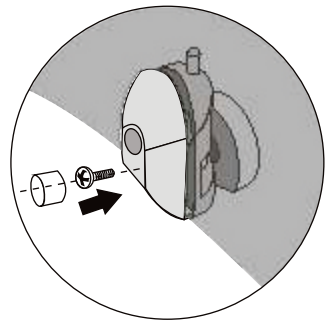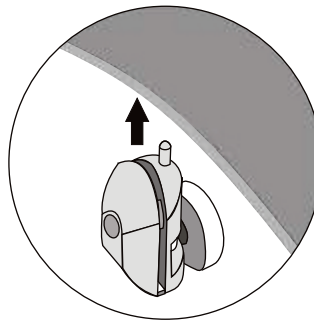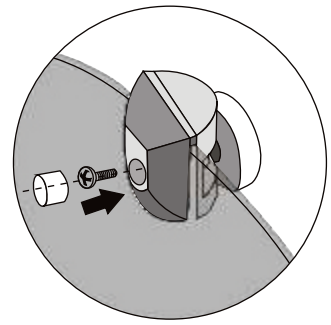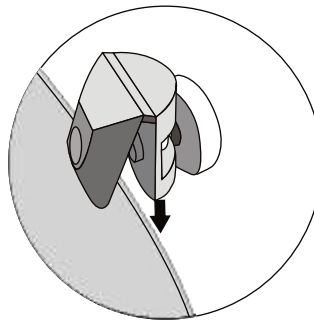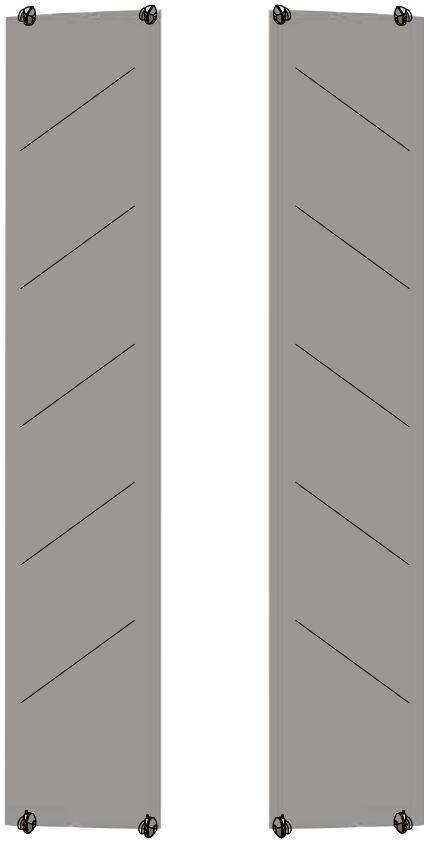

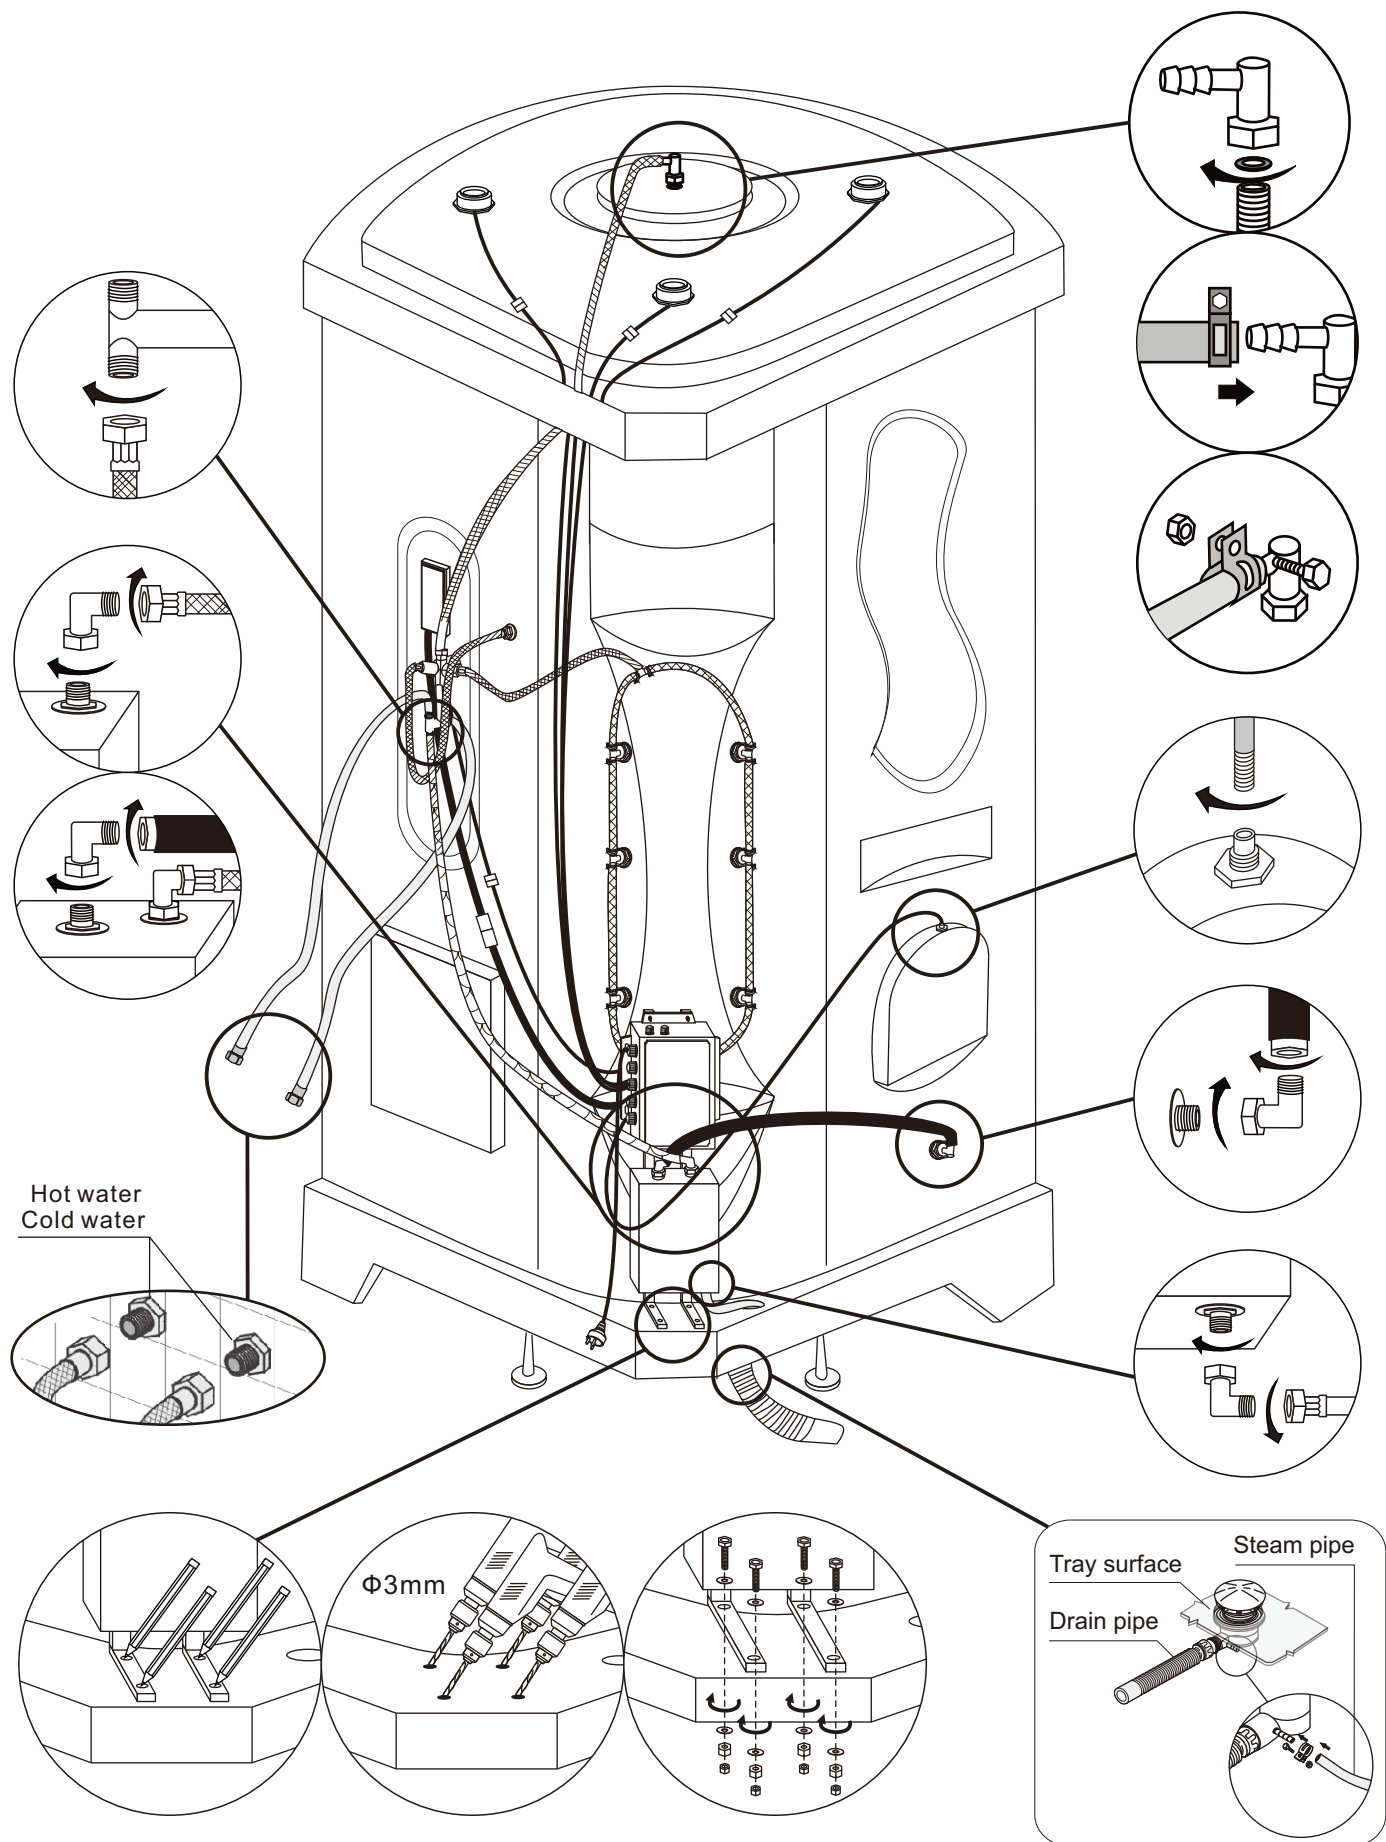

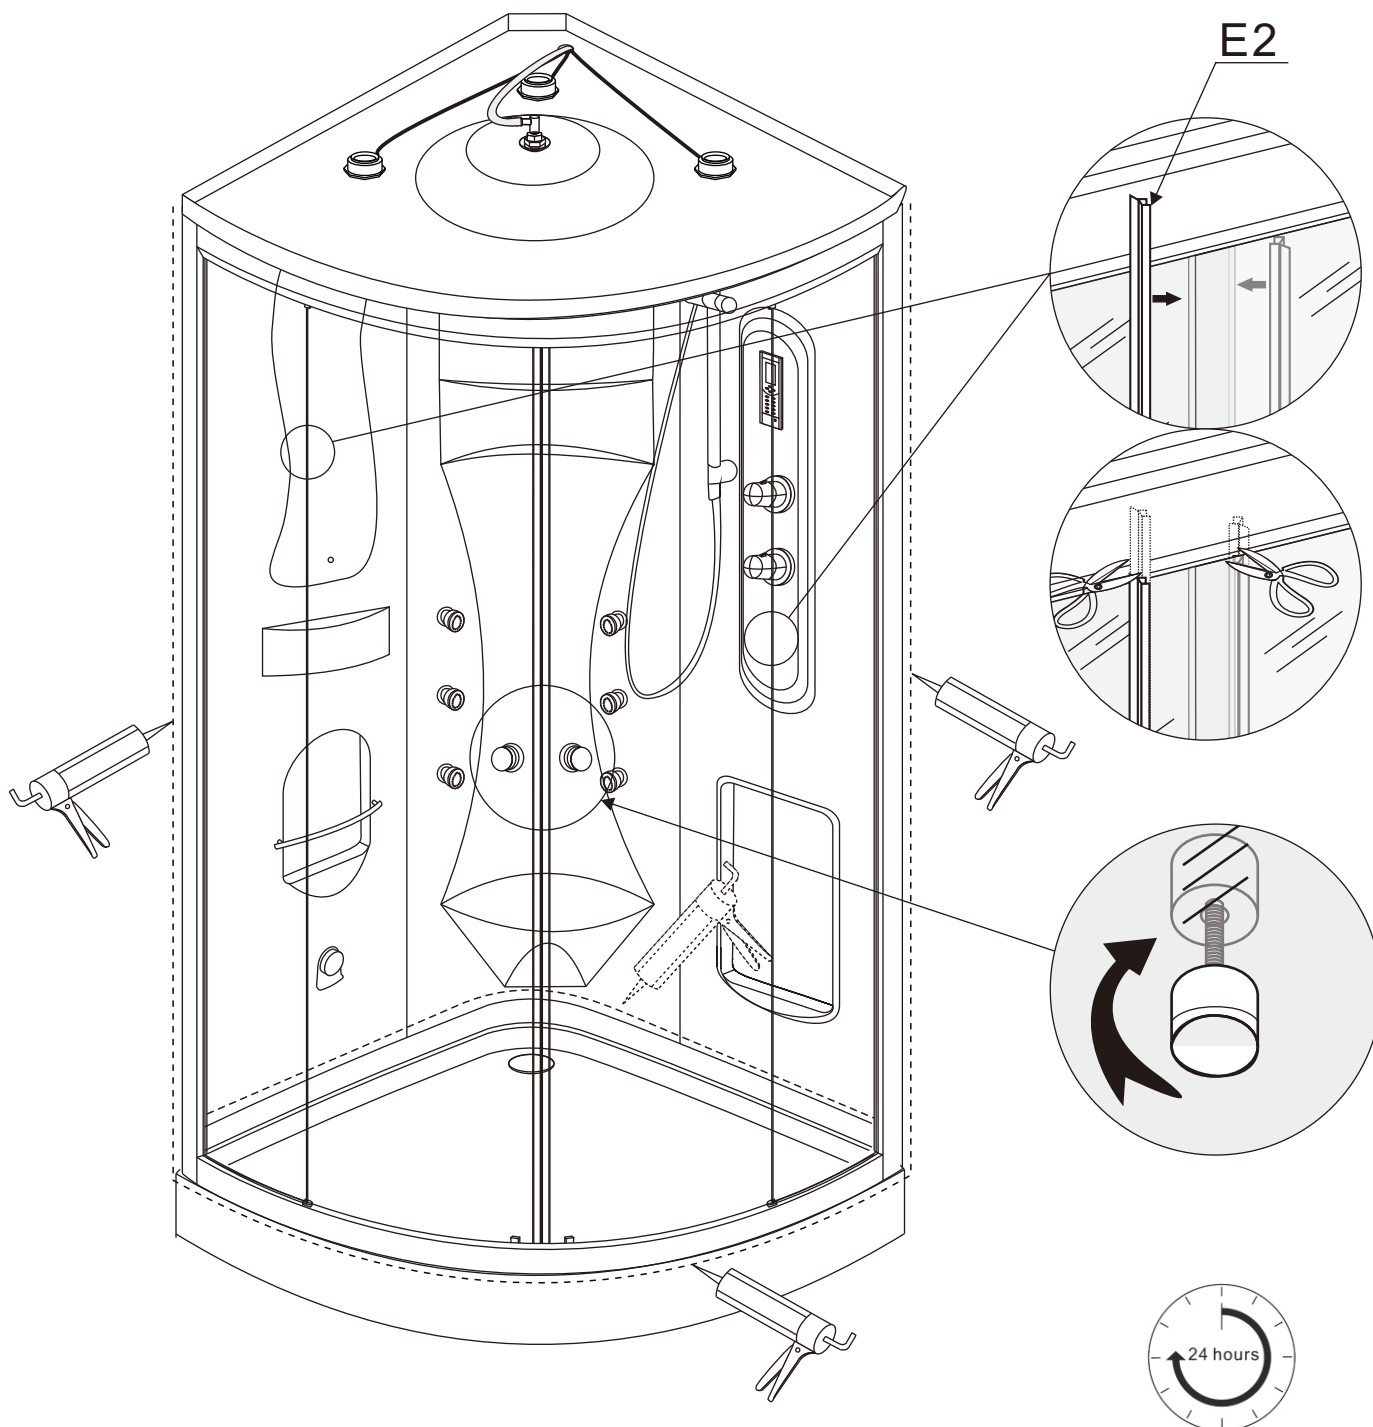

! APPLY SANITARY SILICONE AS SHOWN ABOVE.
DO NOT APPLY SILICONE SEALANT TO THE INSIDE OF THE
ENCLOSURE.

! ALLOW 24 HOURS FOR SILICONE TO FULLY DRY BEFORE USE.